



ER SERVICE MANUAL

< Table of Contents >

1.	Introduction.....	5
1.1.	Preface.....	5
1.2.	Precaution.....	5
1.3.	Specification	6
1.3.1.	Kilogram (kg) Version	6
1.3.2.	Pound (lb) Version	7
1.4.	LCD Version	8
1.5.	VFD Version.....	8
1.6.	LED Version	8
1.7.	Dimension	9
1.8.	Sealing Method.....	10
2.	Calibration.....	12
2.1.	General Calibration.....	12
2.1.1.	C4 Setting.....	13
2.1.1.1.	C4-1 Setting.....	13
2.1.1.2.	C4-2 Setting.....	13
2.1.1.3.	C4-3 Setting.....	13
2.1.1.4.	C4-4 Setting.....	14
2.1.1.5.	C4-5 Setting.....	14
2.1.2.	SPAN Calibration Setting (C-3).....	15
2.1.3.	Gravity Constant Value Setting (C-9).....	15
2.1.4.	Calibration factor Setting (C-10)	16
2.1.5.	Displaying Real A/D Value (C-5).....	16
2.1.6.	Input Function Key Code (C-6)	17
2.1.7.	Percent Calibration (C-7).....	18
2.1.8.	Battery Calibration (C-8).....	18
3.	The Schematics and Diagram.....	19
3.1.	System Block Diagram.....	19
3.2.	Circuit Diagram.....	20
3.2.1.	LCD Version.....	20
3.2.1.1.	Main	20
3.2.1.2.	Power part.....	21
3.2.1.3.	Display Part	22
3.2.1.4.	Key Part.....	23
3.2.1.5.	Pole front display Part.....	24

3.2.1.6.	Pole rear display Part.....	25
3.2.1.7.	Front display Part	26
3.2.1.8.	Rear display Part	27
3.2.1.9.	RS232 Part.....	28
3.2.2.	LED Version	29
3.2.2.1.	Main	29
3.2.2.2.	Power part.....	30
3.2.2.3.	Key Part.....	31
3.2.2.4.	Pole front display Part.....	32
3.2.2.5.	Pole rear display Part.....	33
3.2.2.6.	Front display Part	34
3.2.2.7.	Rear display Part	35
3.2.2.8.	RS232 Part.....	36
3.2.3.	VFD Version.....	37
3.2.3.1.	Main	37
3.2.3.2.	Power part.....	38
3.2.3.3.	Key Part.....	39
3.2.3.4.	Pole front display Part.....	40
3.2.3.5.	Pole rear display Part.....	41
3.2.3.6.	Front display Part	42
3.2.3.7.	Rear display Part	43
3.2.3.8.	RS232 Part.....	44
4.	Exploded View.....	45
5.	Load Cell drawing.....	47
6.	Part Location.....	48
6.1.	LCD Version	48
6.1.1.1.	Main PCB Part Location	48
LCD MAIN		48
6.1.1.2.	FRONT DISPLAY PCB Part Location.....	49
LCD FRONT DISPLAY		49
6.1.1.3.	REAR DISPLAY PCB Part Location	50
LCD REAR DISPLAY		50
6.1.1.4.	POLE DISPLAY PCB Part Location	51
LCD FRONT DISPLAY		51
LCD REAR DISPLAY		52
6.1.2.	VFD Version.....	53
6.1.2.1.	Main PCB Part Location	53
VFD MAIN		53
6.1.2.2.	VFD FRONT DISPLAY PCB Part Location	54

VFD FRONT DISPLAY	54
6.1.2.3. VFD REAR DISPLAY PCB Part Location	55
VFD REAR DISPLAY	55
6.1.2.4. POLE DISPLAY PCB Part Location	56
VFD POLE DISPLAY TYPE #1	56
VFD POLE DISPLAY TYPE #2	57
6.1.3. LED Version	58
6.1.3.1. Main PCB Part Location	58
6.1.3.2. FRONT DISPLAY PCB Part Location	59
6.1.3.3. REAR DISPLAY PCB Part Location	60
6.1.4. COMMON PCB	61
6.1.4.1. RS-232 MODULE PCB Part Location	61
RS-232 PCB (TOP)	61
RS-232 PCB (BOTTOM)	61
6.1.4.2. KEY PCB Part Location (Pb)	62
KEY PCB	62
7. Error Messages & Solution	63
8. Part List	64

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*