



# ER SERVICE MANUAL

< Table of Contents >

<b>1. Introductions.....</b>	<b>4</b>
<b>1.1. The Preface.....</b>	<b>4</b>
<b>1.2. Precautions.....</b>	<b>4</b>
<b>1.3. Specification.....</b>	<b>5</b>
<b>1.3.1. Kilogram (kg) Version.....</b>	<b>5</b>
<b>1.3.2. Pound (lb) Version.....</b>	<b>7</b>
<b>1.4. LCD Version.....</b>	<b>8</b>
<b>1.5. VFD Version.....</b>	<b>8</b>
<b>1.6. Sealing Method.....</b>	<b>9</b>
<b>2. Calibration.....</b>	<b>10</b>
<b>2.1. General Calibration.....</b>	<b>10</b>
<b>2.1.1. C4 setting.....</b>	<b>10</b>
<b>2.1.2. Setting SPAN.....</b>	<b>12</b>
<b>2.1.3. Setting % of Weight.....</b>	<b>12</b>
<b>2.1.4. Setting Gravity Constant Value.....</b>	<b>13</b>
<b>2.1.5. Back to Normal Mode.....</b>	<b>13</b>
<b>2.1.6. Displaying SPAN Calibrated A/D value.....</b>	<b>13</b>
<b>2.1.7. Key Value Display.....</b>	<b>14</b>
<b>2.1.8. INPUT SOFT KEY CODES.....</b>	<b>14</b>
<b>2.1.9. Real A/D Value Display.....</b>	<b>15</b>
<b>3. The Schematics and Diagram.....</b>	<b>16</b>
<b>3.1. System Block Diagram.....</b>	<b>16</b>
<b>3.2. Circuit Diagram.....</b>	<b>17</b>
<b>3.2.1. VFD Version.....</b>	<b>17</b>
<b>3.2.1.1. Main .....</b>	<b>17</b>
<b>3.2.1.2. Power.....</b>	<b>18</b>
<b>3.2.1.3. FRONT DISPLAY.....</b>	<b>19</b>
<b>3.2.1.4. REAR DISPLAY.....</b>	<b>21</b>
<b>3.2.1.5. POLE DISPLAY.....</b>	<b>22</b>
<b>3.2.2. LCD Version.....</b>	<b>23</b>
<b>3.2.2.1. Main.....</b>	<b>23</b>
<b>3.2.2.2. Power.....</b>	<b>24</b>
<b>3.2.2.3. DISPLAY DRIVER.....</b>	<b>26</b>
<b>3.2.2.4. FRONT DISPLAY.....</b>	<b>27</b>
<b>3.2.2.5. REAR DISPLAY.....</b>	<b>28</b>
<b>COMMON CIRCUIT.....</b>	<b>29</b>

3.2.2.6. Analog to Digital Module.....	29
3.2.2.7. KEY.....	30
3.2.2.8. RS-232.....	31
3.3. Wiring Diagram.....	32
3.3.1. LCD Version.....	32
3.3.2. VFD VERSION.....	33
3.4. Part Location.....	34
3.4.1. LCD Version.....	34
3.4.1.1. Main PCB Part Location.....	34
LCD MAIN .....	34
3.4.1.2. FRONT DISPLAY PCB Part Location.....	35
LCD FRONT DISPLAY .....	35
3.4.1.3. REAR DISPLAY PCB Part Location.....	36
LCD REAR DISPLAY .....	36
3.4.1.4. POLE DISPLAY PCB Part Location.....	37
LCD FRONT DISPLAY .....	37
LCD REAR DISPLAY .....	38
3.4.2. VFD Version.....	39
3.4.2.1. Main PCB Part Location.....	39
VFD MAIN .....	39
3.4.2.2. VFD FRONT DISPLAY PCB Part Location.....	40
VFD FRONT DISPLAY .....	40
3.4.2.3. VFD REAR DISPLAY PCB Part Location.....	41
VFD REAR DISPLAY .....	41
3.4.2.4. POLE DISPLAY PCB Part Location.....	42
VFD POLE DISPLAY TYPE #1 .....	42
VFD POLE DISPLAY TYPE #2 .....	43
3.4.3. COMMON PCB.....	44
3.4.3.1. ANALOG MODULE PCB Part Location.....	44
ANALOG MODULE PCB .....	44
3.4.3.2. RS-232 MODULE PCB Part Location.....	45
RS-232 PCB .....	45
3.4.3.3. KEY PCB Part Location (Pb).....	46
KEY PCB .....	46
3.4.3.4. Exploded View.....	48
4. "Err 1".....	49
Serial Interface.....	50

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/ER-6 ER-15 ER-30 ER-15LB ER-30LB ER->

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)