



ER-jr SERVICE MANUAL

< Table of Contents >

1.	Introduction.....	4
1.1.	Preface.....	4
1.2.	Precaution.....	4
1.3.	Specifications	5
1.4.	Dimension	6
1.5.	Key & SYMBOLS ON DISPLAY.....	7
1.6.	SealingMethod	8
2.	Calibration.....	10
2.1.	General Calibration.....	10
2.1.1.	C4 Setting.....	11
2.1.1.1.	C4-1 Setting.....	11
2.1.1.2.	C4-2 Setting.....	11
2.1.1.3.	C4-3 Setting.....	11
2.1.1.4.	C4-4 Setting.....	12
2.1.1.5.	C4-5 Setting.....	12
2.1.2.	SPAN Calibration Setting (C-3)	13
2.1.3.	Gravity Constant Value Setting (C-9)	13
2.1.4.	Calibration factor Setting (C-10)	14
2.1.5.	Displaying Real A/D Value (C-5).....	14
2.1.6.	Input Function Key Code (C-6)	15
2.1.7.	Percent Calibration (C-7).....	16
2.1.8.	Battery Calibration (C-8).....	16
3.	The Schematics and Diagram.....	18
3.1.	System Block Diagram.....	18
3.1.1.	Main.....	19
3.1.2.	Power Part & Back_Light	20
3.1.3.	Key Part.....	21
3.1.4.	Display Driver(Main PCB) & REAR Display	22
4.	Exploded View Load Cell drawing	23
4.	Load Cell drawing.....	24
5.	Part Location.....	25
5.1.	Main PCB (Top).....	25
5.2.	Main PCB (Bottom).....	26
5.3.	Rear Display PCB (Top).....	27

5.4. Rear Display PCB (Bottom)27

6. Error Messages & Solution.....28

7. Part List.....29

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*