



# **ER-jr SERVICE MANUAL**

## < Table of Contents >

<b>1.</b>	<b>Introduction.....</b>	<b>4</b>
<b>1.1.</b>	<b>Preface.....</b>	<b>4</b>
<b>1.2.</b>	<b>Precaution.....</b>	<b>4</b>
<b>1.3.</b>	<b>Specifications .....</b>	<b>5</b>
<b>1.4.</b>	<b>Dimension .....</b>	<b>6</b>
<b>1.5.</b>	<b>Key &amp; SYMBOLS ON DISPLAY.....</b>	<b>7</b>
<b>1.6.</b>	<b>SealingMethod .....</b>	<b>8</b>
<b>2.</b>	<b>Calibration.....</b>	<b>10</b>
<b>2.1.</b>	<b>General Calibration.....</b>	<b>10</b>
<b>2.1.1.</b>	<b>C4 Setting.....</b>	<b>11</b>
<b>2.1.1.1.</b>	<b>C4-1 Setting.....</b>	<b>11</b>
<b>2.1.1.2.</b>	<b>C4-2 Setting.....</b>	<b>11</b>
<b>2.1.1.3.</b>	<b>C4-3 Setting.....</b>	<b>11</b>
<b>2.1.1.4.</b>	<b>C4-4 Setting.....</b>	<b>12</b>
<b>2.1.1.5.</b>	<b>C4-5 Setting.....</b>	<b>12</b>
<b>2.1.2.</b>	<b>SPAN Calibration Setting (C-3) .....</b>	<b>13</b>
<b>2.1.3.</b>	<b>Gravity Constant Value Setting (C-9) .....</b>	<b>13</b>
<b>2.1.4.</b>	<b>Calibration factor Setting (C-10) .....</b>	<b>14</b>
<b>2.1.5.</b>	<b>Displaying Real A/D Value (C-5).....</b>	<b>14</b>
<b>2.1.6.</b>	<b>Input Function Key Code (C-6) .....</b>	<b>15</b>
<b>2.1.7.</b>	<b>Percent Calibration (C-7).....</b>	<b>16</b>
<b>2.1.8.</b>	<b>Battery Calibration (C-8).....</b>	<b>16</b>
<b>3.</b>	<b>The Schematics and Diagram.....</b>	<b>18</b>
<b>3.1.</b>	<b>System Block Diagram.....</b>	<b>18</b>
<b>3.1.1.</b>	<b>Main.....</b>	<b>19</b>
<b>3.1.2.</b>	<b>Power Part &amp; Back_Light .....</b>	<b>20</b>
<b>3.1.3.</b>	<b>Key Part.....</b>	<b>21</b>
<b>3.1.4.</b>	<b>Display Driver(Main PCB) &amp; REAR Display .....</b>	<b>22</b>
<b>4.</b>	<b>Exploded View Load Cell drawing .....</b>	<b>23</b>
<b>4.</b>	<b>Load Cell drawing.....</b>	<b>24</b>
<b>5.</b>	<b>Part Location.....</b>	<b>25</b>
<b>5.1.</b>	<b>Main PCB (Top).....</b>	<b>25</b>
<b>5.2.</b>	<b>Main PCB (Bottom).....</b>	<b>26</b>
<b>5.3.</b>	<b>Rear Display PCB (Top).....</b>	<b>27</b>

**5.4. Rear Display PCB (Bottom) .....27**

**6. Error Messages & Solution.....28**

**7. Part List.....29**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/ER-JR Service manual.html](https://the-checkout-tech.com/manuals/CAS/ER-JR%20Service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)