

*FS-8000*

---

Digital  
Weighing Indicator

**INSTRUCTION MANUAL**

# **CONTENTS**

## **CHAPTER 1. PREFACE**

1-1	INTRODUCE.....	3
1-2	SAFTY CONDITIONS.....	3
1-3	FEATURES.....	4
1-4	FRONT PANEL DESCRIPTION.....	5
1-4-1	LAMP.....	5
1-4-2	HOW TO USE KEY.....	6
1-5	REAR-SIDE PANEL.....	9
1-6	SPECIFICATION.....	11
1-7	THE EXAMPLE FOR THE CONNECTING TO EXTERNAL DEVICES.....	12

## **CHAPTER 2. INSTALLATION.....**

2-1	OUT-DIMMENSION & CUTTING SIZE...	14
2-2	ASSEMBLE DRAWING.....	15
2-3	HOW TO CONNECT LOADCELL.....	16
2-4	ERROR & A/S.....	17

## **CHAPTER 3. CALIBRATION.....**

3-1	ZERO ADJUSTMENT.....	18
3-2	SPAN CALIBRATION.....	20
3-3	ERROR MESSAGES & ADJUST.....	24

## **CHAPTER 4. SET-UP.....**

4-1	PREFACE.....	27
4-2	SET-UP.....	27
4-3	F-FUNCTION SUMMARY LIST.....	29

## **CHAPTER 5. SET-UP ILLUSTRATION.....**

5-1	BASIC FUNCTION FOR WEIGHING.....	30
5-2	BASIC FUNCTION FOR DEVICES.....	32
5-3	SERIAL INTERFACE .....	37
5-3-1	RS-232C SERIAL INTERFACE.....	38
5-3-2	OP-02 CURRENT LOOP.....	40
5-4	ADDITIONAL SET UP FUNCTION.....	42
5-4-1	OP-03 BCD OUT.....	42
5-4-2	OP-04 RS-422/485 SERIAL .....	44
5-4-3	OP-05/06 ANALOG OUT.....	45
5-4-4	OP-07 PRINTER.....	48
5-4-5	OP-10 BCD INPUT.....	50

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/FS-8000> instruction and calibration manual

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)