

OCTOBER, 2005

---

**LP 1.6 VERSION**

---

**SERVICE MANUAL**

**CAS CORPORATION**

# INDEX

<b>1. BLOCK DIAGRAM</b>	<b>3</b>
<b>2. CONNECTION DIAGRAM</b>	<b>4</b>
<b>3. OPENING THE UNIT</b>	<b>5</b>
<b>4. SCALE CALIBRATION</b>	<b>6 ~ 15</b>
<b>5. SCHEMATIC DIAGRAM</b>	<b>16 ~ 23</b>
<b>6. PC BOARD DIAGRAM (PCB LAYOUT)</b>	<b>24 ~ 29</b>
<b>7. DEVICE DESCRIPTION</b>	<b>30 ~ 45</b>
<b>8. TROUBLE SHOOTING</b>	<b>46</b>
<b>9. SEALING METHOD</b>	<b>47 ~ 48</b>
<b>10. EXPLODED VIEW</b>	<b>49 ~ 51</b>
<b>11. PARTS LIST</b>	<b>52 ~ 61</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/LP 1.6 service and calibration manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)