

**Thermal Label Printing Scale**

# LP-II

## SERVICE MANUAL

Version 3.0



# Table of Contents

## 1 General

1.1	Introduction .....	1
1.2	Model and Specifications.....	2
1.3	Dimensions.....	3

## 2 Unpacking and Assembly

2.1	Unpacking .....	4
2.2	Assembly of DisplayColumn .....	5

## 3 Proper Operation

3.1	Environmental Considerations and Safety.....	6
3.2	Leveling and Location.....	7
3.3	Power Outlet and Requirements .....	8

## 4 Nomenclature

4.1	Scale Overview .....	9
4.2	Display and Indicators.....	10
4.3	Printer.....	11
4.4	The Program Mode Numeric Keypad.....	12
4.5	The Program Mode PLU Keypad .....	14

## 5 Getting Started

5.1	Installation of the Label Roll.....	16
5.2	Menu and Data Entry System.....	18

## 6 Calibration Mode

6.1	Entering Calibration Mode .....	20
6.1A	Entering Calibration Mode (alternate method) .....	20

## 7 Calibrating the Scale Warranty Info

7.1	Calibration Menu .....	21
7.2	Span Calibration .....	21
7.3	Span/Zero Find Adjust.....	22
7.4	Gravity Constant .....	23

## 8 System Options

8.1	Weight Options .....	25
8.1.1	Capacity & Units.....	25
8.1.2	Tare Options .....	26
8.1.3	Zero Range .....	26
8.1.4	Captions & Headings .....	27
8.2	Non-Weight Options .....	29
8.2.2	Auto Print Threshold .....	29
8.3	Report Settings .....	30
8.4	Decimal Place Setting .....	29
8.5	Keypad Options.....	30
8.6	Clear Memory .....	31
8.7	Select country .....	32

## 9 Digital Filtering

9.1	Digital Filter Settings.....	33
-----	------------------------------	----

<b>10 Printer Hardware Settings</b>	
10.1 Printer Hardware Settings Menu .....	34
10.2 Printer Sensors .....	34
10.2.1 Gap/Peel Calibrate.....	34
10.2.2 Gap Sensor Fine Adjust .....	35
10.2.3 Peel Sensor Fine Adjust.....	35
10.3 Print Speed .....	35
10.4 Printer Odometer .....	36
10.5 Label Type .....	36
10.6 Feed Adjust .....	38
10.7 Auto Threshold .....	38
10.8 Report Settings.....	38
<b>11 Networking</b>	
11.1 Setting Up a Network.....	39
<b>12 Self Test Mode</b>	
12.1 Self Test Menu .....	41
12.2 Display Test .....	41
12.3 Load Cell Test.....	41
12.4 Keyboard Test .....	42
12.5 Printer Test.....	43
12.6 Peel Off Test .....	44
12.7 Memory Size .....	44
12.8 NV Memory Test.....	44
12.9 Serial Port Test .....	45
12.10 Firware Versions Test .....	45
<b>13 Audit Trails</b>	
13.1 Reading Audit Trail Counters .....	46
<b>14 Servicing and Parts Replacement</b>	
14.1 Platform Safety Overload Adjustment .....	47
14.2 Removing the Upper Case.....	47
14.3 Main PCB Replacement .....	49
14.4 Network Board Replacement.....	50
14.5 Power Supply Replacement .....	50
14.6 Load Cell and A/D Converter Replacement.....	51
14.7 Printer Assembly Replacement.....	51
14.7.1 Rewind Motor Assembly Replacement.....	52
14.7.2 Stepper Motor Assembly Replacement.....	52
14.7.3 Thermal Print Head Replacement.....	53
14.7.4 Gap Sensor Assembly Replacement.....	53
14.7.5 Peel Sensor Assembly Replacement .....	53
14.7.6 Label Roll Spool Replacement .....	54
14.7.7 Width Adjuster Replacement.....	54
14.8 Display Replacement .....	54
14.9 Keyboard Replacement.....	54
14.10 Keyboard Servicing.....	55

<b>15</b>	<b>Installing Options</b>	
15.1	Installing the Network Memory Card .....	56
15.2	Installing the Paper Cutter .....	56
<b>16</b>	<b>Troubleshooting</b>	
16.1	Troubleshooting Chart .....	57
16.2	Additional Errors .....	59
<b>17</b>	<b>Diagrams</b>	
17.1	System Block Diagram .....	60
17.2	Connection Diagram .....	61
17.3	Main PCB .....	Fold-out 1
17.4	Network PCB .....	Fold-out 2
17.5	Power Supply PCB .....	Fold-out 3
17.6	Scale Exploded View .....	Fold-out 4
17.7	Printer Assembly Exploded View .....	Fold-out 5
<b>18</b>	<b>Part's List</b>	
18.1	Electrical .....	62
18.1.1	Ethernet Memory Optional Board Ass'y .....	62
18.1.2	Peel Off Sensor PCB Ass'y .....	62
18.1.3	Ethernet Option Board Ass'y .....	63
18.1.4	Analog Module Ass's .....	63
18.1.5	Analog PCB Ass'y .....	64
18.1.6	Body Ass'y .....	64
18.1.7	Main PCB Ass'y .....	65
18.1.8	Cal PCB Ass'yl .....	66
18.1.9	Display PCB Ass'y .....	66
18.1.10	AP Sensor PCB Ass'y .....	67
18.1.11	Key PCB Ass'y .....	67
18.2	Mechancal .....	67
18.2.1	Upper Case Ass'y .....	67
18.2.2	Display Case Ass'y .....	68
18.2.3	Body Ass'y .....	68
18.2.4	L/C Brackey Ass'yl .....	69
18.2.5	POT Ass'y .....	69
18.2.6	Front Cover Ass'y .....	69
18.3	Mechanism .....	69
18.3.1	TPH Ass'y .....	69
18.3.2	Main Bracket Ass'y .....	70
18.3.3	Rewinder Ass'y .....	70
18.3.4	Paper Guide Ass'y .....	71
18.3.5	Stepping Motor Ass'y .....	71
18.3.6	Roll Bracket Ass'y .....	71
18.3.7	C/T Box Ass'y .....	71
	<b>Appendix A: Country Codes .....</b>	<b>62</b>
	<b>Appendix B: Label Formats .....</b>	<b>63</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*