

Thermal Label Printing Scale

LP-II

SERVICE MANUAL

Version 3.0



Table of Contents

1 General

| | | |
|-----|-------------------------------|---|
| 1.1 | Introduction | 1 |
| 1.2 | Model and Specifications..... | 2 |
| 1.3 | Dimensions..... | 3 |

2 Unpacking and Assembly

| | | |
|-----|---------------------------------|---|
| 2.1 | Unpacking | 4 |
| 2.2 | Assembly of DisplayColumn | 5 |

3 Proper Operation

| | | |
|-----|--|---|
| 3.1 | Environmental Considerations and Safety..... | 6 |
| 3.2 | Leveling and Location..... | 7 |
| 3.3 | Power Outlet and Requirements | 8 |

4 Nomenclature

| | | |
|-----|--------------------------------------|----|
| 4.1 | Scale Overview..... | 9 |
| 4.2 | Display and Indicators | 10 |
| 4.3 | Printer..... | 11 |
| 4.4 | The Program Mode Numeric Keypad..... | 12 |
| 4.5 | The Program Mode PLU Keypad | 14 |

5 Getting Started

| | | |
|-----|-------------------------------------|----|
| 5.1 | Installation of the Label Roll..... | 16 |
| 5.2 | Menu and Data Entry System..... | 18 |

6 Calibration Mode

| | | |
|------|--|----|
| 6.1 | Entering Calibration Mode | 20 |
| 6.1A | Entering Calibration Mode (alternate method) | 20 |

7 Calibrating the Scale Warranty Info

| | | |
|-----|----------------------------|----|
| 7.1 | Calibration Menu | 21 |
| 7.2 | Span Calibration | 21 |
| 7.3 | Span/Zero Find Adjust..... | 22 |
| 7.4 | Gravity Constant | 23 |

8 System Options

| | | |
|-------|-----------------------------|----|
| 8.1 | Weight Options | 25 |
| 8.1.1 | Capacity & Units..... | 25 |
| 8.1.2 | Tare Options | 26 |
| 8.1.3 | Zero Range | 26 |
| 8.1.4 | Captions & Headings | 27 |
| 8.2 | Non-Weight Options | 29 |
| 8.2.2 | Auto Print Threshold | 29 |
| 8.3 | Report Settings | 30 |
| 8.4 | Decimal Place Setting | 29 |
| 8.5 | Keypad Options..... | 30 |
| 8.6 | Clear Memory | 31 |
| 8.7 | Select country | 32 |

9 Digital Filtering

| | | |
|-----|------------------------------|----|
| 9.1 | Digital Filter Settings..... | 33 |
|-----|------------------------------|----|

| | |
|---|---|
| 10 Printer Hardware Settings | |
| 10.1 | Printer Hardware Settings Menu 34 |
| 10.2 | Printer Sensors 34 |
| 10.2.1 | Gap/Peel Calibrate..... 34 |
| 10.2.2 | Gap Sensor Fine Adjust 35 |
| 10.2.3 | Peel Sensor Fine Adjust..... 35 |
| 10.3 | Print Speed 35 |
| 10.4 | Printer Odometer 36 |
| 10.5 | Label Type 36 |
| 10.6 | Feed Adjust 38 |
| 10.7 | Auto Threshold 38 |
| 10.8 | Report Settings..... 38 |
| 11 Networking | |
| 11.1 | Setting Up a Network..... 39 |
| 12 Self Test Mode | |
| 12.1 | Self Test Menu 41 |
| 12.2 | Display Test 41 |
| 12.3 | Load Cell Test..... 41 |
| 12.4 | Keyboard Test 42 |
| 12.5 | Printer Test..... 43 |
| 12.6 | Peel Off Test 44 |
| 12.7 | Memory Size 44 |
| 12.8 | NV Memory Test..... 44 |
| 12.9 | Serial Port Test 45 |
| 12.10 | Firmware Versions Test 45 |
| 13 Audit Trails | |
| 13.1 | Reading Audit Trail Counters 46 |
| 14 Servicing and Parts Replacement | |
| 14.1 | Platform Safety Overload Adjustment 47 |
| 14.2 | Removing the Upper Case..... 47 |
| 14.3 | Main PCB Replacement 49 |
| 14.4 | Network Board Replacement..... 50 |
| 14.5 | Power Supply Replacement 50 |
| 14.6 | Load Cell and A/D Converter Replacement..... 51 |
| 14.7 | Printer Assembly Replacement..... 51 |
| 14.7.1 | Rewind Motor Assembly Replacement..... 52 |
| 14.7.2 | Stepper Motor Assembly Replacement..... 52 |
| 14.7.3 | Thermal Print Head Replacement..... 53 |
| 14.7.4 | Gap Sensor Assembly Replacement..... 53 |
| 14.7.5 | Peel Sensor Assembly Replacement 53 |
| 14.7.6 | Label Roll Spool Replacement 54 |
| 14.7.7 | Width Adjuster Replacement..... 54 |
| 14.8 | Display Replacement..... 54 |
| 14.9 | Keyboard Replacement..... 54 |
| 14.10 | Keyboard Servicing..... 55 |

15 Installing Options

| | | |
|------|--|----|
| 15.1 | Installing the Network Memory Card | 56 |
| 15.2 | Installing the Paper Cutter | 56 |

16 Troubleshooting

| | | |
|------|-----------------------------|----|
| 16.1 | Troubleshooting Chart | 57 |
| 16.2 | Additional Errors | 59 |

17 Diagrams

| | | |
|------|--------------------------------------|------------|
| 17.1 | System Block Diagram | 60 |
| 17.2 | Connection Diagram | 61 |
| 17.3 | Main PCB | Fold-out 1 |
| 17.4 | Network PCB | Fold-out 2 |
| 17.5 | Power Supply PCB | Fold-out 3 |
| 17.6 | Scale Exploded View | Fold-out 4 |
| 17.7 | Printer Assembly Exploded View | Fold-out 5 |

18 Part's List

| | | |
|---------|--|----|
| 18.1 | Electrical | 62 |
| 18.1.1 | Ethernet Memory Optional Board Ass'y | 62 |
| 18.1.2 | Peel Off Sensor PCB Ass'y | 62 |
| 18.1.3 | Ethernet Option Board Ass'y | 63 |
| 18.1.4 | Analog Module Ass's | 63 |
| 18.1.5 | Analog PCB Ass'y | 64 |
| 18.1.6 | Body Ass'y | 64 |
| 18.1.7 | Main PCB Ass'y | 65 |
| 18.1.8 | Cal PCB Ass'yl | 66 |
| 18.1.9 | Display PCB Ass'y | 66 |
| 18.1.10 | AP Sensor PCB Ass'y | 67 |
| 18.1.11 | Key PCB Ass'y | 67 |
| 18.2 | Mechanical | 67 |
| 18.2.1 | Upper Case Ass'y | 67 |
| 18.2.2 | Display Case Ass'y | 68 |
| 18.2.3 | Body Ass'y | 68 |
| 18.2.4 | L/C Bracket Ass'yl | 69 |
| 18.2.5 | POT Ass'y | 69 |
| 18.2.6 | Front Cover Ass'y | 69 |
| 18.3 | Mechanism | 69 |
| 18.3.1 | TPH Ass'y | 69 |
| 18.3.2 | Main Bracket Ass'y | 70 |
| 18.3.3 | Rewinder Ass'y | 70 |
| 18.3.4 | Paper Guide Ass'y | 71 |
| 18.3.5 | Stepping Motor Ass'y | 71 |
| 18.3.6 | Roll Bracket Ass'y | 71 |
| 18.3.7 | C/T Box Ass'y | 71 |

| | |
|--|-----------|
| Appendix A: Country Codes | 62 |
|--|-----------|

| | |
|--|-----------|
| Appendix B: Label Formats | 63 |
|--|-----------|

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/LP-II service manual.html](https://the-checkout-tech.com/manuals/CAS/LP-II%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)