

HIGH PRECISION BALANCE

MWP

OWNER'S MANUAL



MWP-2004-12 ver.1.0

INTRODUCTION-----	1
1. INSTALLATION-----	2
Unpacking-----	2
Illustration of the installation for plastic shield-----	2
Selecting the Location-----	3
Leveling the scale-----	3
Connecting Power-----	3
AC power-----	3
Battery power-----	4
2.6 Initial Calibration-----	4
2. OVERVIEW OF DISPLAY INDICATORS AND KEYBOARD FUNCTIONS-----	5
Display Symbols-----	5
Keyboard Functions-----	6
3. OPERATIONS-----	7
Weighing mode-----	7
4.1.1 Units Selection-----	7
4.1.2 Zero Function-----	7
4.1.3 Tare Function-----	7
4.1.4 Over load alarm-----	8
4.2 Counting mode-----	8
4.3 Percentage (%) mode-----	9
4. PARAMETER SET-UP-----	10
Calibration-----	11
To choose the initial unit while turning on-----	12
To choose the "UNIT" you need-----	13
To choose the time of AUTO OFF-----	14
To choose output transmission method-----	15
Baud rate setting for RS232 interface-----	16
To choose the range of stability-----	17
To choose the Zero display range-----	18
To choose the Zero Recovery display range -----	19
To choose the auto-average in sampling on counting mode-----	20
To choose Backlight mode-----	21
5. AUTO CALIBRATION-----	22
6. RECOVERY OF THE DEFAULT VALUES FROM MEMORY-----	22
7. ERROR MESSAGES-----	22
8. SPECIFICATION OF RS-232 INTERFACE-----	23
9. CONVERSION UNITS TABLE FOR WEIGHTS-----	25
10. TABLE LIST FOR FULL CAPACITY-----	25
12.TECHNICAL DATA-----	26

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net