

HIGH PRECISION BALANCE

MWP

OWNER'S MANUAL



MWP-2004-12 ver.1.0

INTRODUCTION	1
1. INSTALLATION	2
Unpacking	2
Illustration of the installation for plastic shield	2
Selecting the Location	3
Leveling the scale	3
Connecting Power	3
AC power	3
Battery power	4
2.6 Initial Calibration	4
2. OVERVIEW OF DISPLAY INDICATORS AND KEYBOARD FUNCTIONS	5
Display Symbols	5
Keyboard Functions	6
3. OPERATIONS	7
Weighing mode	7
4.1.1 Units Selection	7
4.1.2 Zero Function	7
4.1.3 Tare Function	7
4.1.4 Over load alarm	8
4.2 Counting mode	8
4.3 Percentage (%) mode	9
4. PARAMETER SET-UP	10
Calibration	11
To choose the initial unit while turning on	12
To choose the "UNIT" you need	13
To choose the time of AUTO OFF	14
To choose output transmission method	15
Baud rate setting for RS232 interface	16
To choose the range of stability	17
To choose the Zero display range	18
To choose the Zero Recovery display range	19
To choose the auto-average in sampling on counting mode	20
To choose Backlight mode	21
5. AUTO CALIBERATION	22
6. RECOVERY OF THE DEFAULT VALUES FROM MEMORY	22
7. ERROR MESSAGES	22
8. SPECIFICATION OF RS-232 INTERFACE	23
9. CONVERSION UNITS TABLE FOR WEIGHTS	25
10. TABLE LIST FOR FULL CAPACITY	25
12. TECHNICAL DATA	26

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/MWP Series owners manual.html](https://the-checkout-tech.com/manuals/CAS/MWP%20Series%20owners%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)