

Mathias Bäuerle GmbH · Gewerbehallestr. 7-11 · D-78112 St.Georgen
Tel: 07724 / 882-0 · Fax: 07724 / 882-111 · Serviceline: +49-7724 / 882-250
E-Mail: center@mbfold.de



Service Manual

multimaster CAS 35

Date: 10/07/2002

Contents

	Page
1. Removal of Side Cover.....	5
2. Basic Setting of Fold Plates.....	7
3. Readjustment of Fold Plate Length	9
4. PIN-Code Functions	13
Access to the Service Program	Page 13 / Item 1
Reset of Counters.....	Page 13 / Item 2
Re-Initializing	Page 13 / Item 3
Reset of Jobs	Page 13 / Item 4
Factory Default	Page 14 / Item 5
5. Functions in Service Program	15
Phtoto Detectors	Page 15 / Item 1
Motor Fold Unit	Page 15 / Item 2
Key Control.....	Page 15 / Item 3
Software	Page 16 / Item 4
Suction Drum	Page 16 / Item 5
Fold Plate 1	Page 16 / Item 6
Fold Plate 2	Page 16 / Item 7
Delivery	Page 17 / Item 8
Total-/Service Counter	Page 17 / Item 9
Potentiometer R45 *.....	Page 17 / Item 10
Continuous Run	Page 18 / Item 11
Setting T1_T2_150mm	Page 18 / Item 12
Select Deliverytable version	Page 18 / Item 13
 * for PBA-Machines only	
6. Basic Setting of Delivery	19
6.2a Delivery – Version 1 up to Ser.-No. 0205 20022	19
6.2b Delivery – Version 2 (50mm) from Ser.-No. 0205 20023	19
7. Replacement of Rollers.....	<i>xx</i>
8. Replacement of Control Board	21
9. Change of Software	23
Software Versions.....	Page 23 / Item 9.1
Replacement of Software / Eprom	Page 24 / Item 9.3

10. Basic Setting of Double Sheet Photo Detector * / Potentiometer R45 *	26
11. Cleaning / Replacing the Double Sheet Photo Detector *	27
12. Error Messages + Possible Causes	29
13. Test Points	33
13.1 up to Ser.-No.: 0205 20022	33
13.2 from Ser.-No.: 0205 20023	35
14. Fuses	37
14.1 up to Ser.-No.: 0205 20022	37
14.2 from Ser.-No.: 0205 20023	38
15. Schematics	39
15.1 up to Ser.-No.: 0205 20022	
15.1.1 Wiring Diagram 1 230 VAC.....	Page 39
15.1.2 Wiring Diagram 2 230 VAC.....	Page 40
15.1.3 Wiring Diagram 1 120 VAC.....	Page 41
15.1.4 Wiring Diagram 2 120 VAC.....	Page 42
15.1.5 Component Placement Control Board	Page 43
15.2 from Ser.-No.: 0205 20023	
15.2.1 Wiring Diagram 1 230 VAC.....	Page 44
15.2.2 Wiring Diagram 2 230 VAC.....	Page 45
15.2.3 Wiring Diagram 1 120 VAC.....	Page 46
15.2.4 Wiring Diagram 2 120 VAC.....	Page 47
15.2.5 Component Placement Control Board.....	Page 48
16. Speed Controller / Frequenz Inverter	49
16.1 Terminal connection diagram	Page 50
16.2 Layout and wiring of main circuit terminals	Page 51
16.3 Description of I/O Terminal Specifications	Page 52
16.4 Errors (Alarms)	Page 54
16.5 Parameter List	Page 62
17. Special Tools	73
<i>18. Disassembly of Machine into Components</i>	<i>xx</i>

* for PBA-Machines only

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/Multimaster 35 service manual.html](https://the-checkout-tech.com/manuals/CAS/Multimaster%2035%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)