

INDUSTRIAL INDICATOR

MODEL : NT-570A

Owner's MANUAL

CAS

Table of Contents

1. Introduction.....	3
2. Features.....	4
3. Technical Specification.....	5
4. Measure of Appearance.....	7
5. Front Panel.....	8
6. Rear Panel.....	11
7. How to Install.....	12
8. Test Mode.....	13
9. Calibration Mode.....	17
10. Set Mode.....	21
11. Weighing Mode.....	33
(1) How to go to weighing mode	
(2) Available Keys	
(3) External Control Of Input/Output Interface	
(4) Set-point Code	
(5) How To Enter Set-point	
(6) Set-point Condition	
(7) Batching Operation	
a. User Program Control Mode	
- Normal Batching	
- Loss-in-Weight Batching	
b. Automatic Program Control Mode	
- Normal Batching	
- Loss-in-Weight Batching	
12. Serial Interface (COM1, COM2).....	48
13. Options.....	52
(1) OP-1 : Current Out	
(2) OP-2 : RS-422/485 Serial Out	
(3) OP-3 : BCD Out Interface	
(4) OP-4 : Analog Out Interface (4-20mA)	
(5) OP-5 : Analog Out Interface (0-10V)	
14. Error Message & Troubleshooting	58
(1) WEIGHING Mode	
(2) CAL Mode	

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/NT-570A operation and technical manual.htm](https://the-checkout-tech.com/manuals/CAS/NT-570A%20operation%20and%20technical%20manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)