



PR PLUS SERVICE MANUAL

< Table of Contents >

1.	Introduction.....	4
1.1.	Preface.....	4
1.2.	Precaution.....	4
1.3.	Specifications.....	5
1.4.	Dimension.....	6
1.5.	Key & SYMBOLS ON DISPLAY.....	8
1.6.	SealingMethod.....	9
2.	Calibration.....	10
2.1.	General Calibration.....	10
2.1.1.	C4 Setting.....	11
2.1.1.1.	C4-1 Setting.....	11
2.1.1.2.	C4-2 Setting.....	11
2.1.1.3.	C4-3 Setting.....	11
2.1.1.4.	C4-4 Setting.....	12
2.1.1.5.	C4-5 Setting.....	12
2.1.2.	SPAN Calibration Setting (C-3).....	13
2.1.3.	Gravity Constant Value Setting (C-9).....	13
2.1.4.	Calibration factor Setting (C-10).....	14
2.1.5.	Displaying Real A/D Value (C-5).....	14
2.1.6.	Input Function Key Code (C-6).....	15
2.1.7.	Percent Calibration (C-7).....	16
2.1.8.	Battery Calibration (C-8).....	16
3.	The Schematics and Diagram.....	18
3.1.	System Block Diagram.....	18
3.1.1.	Main.....	19
3.1.2.	Power Part & Back_Light.....	20
3.1.3.	Key Part.....	21
3.1.4.	Display Driver(Main PCB) & REAR Display.....	22
4.	Exploded View Load Cell drawing.....	23
4.	Load Cell drawing.....	25
5.	Part Location.....	26
5.1.	Main PCB (Top).....	26
5.2.	Main PCB (Bottom).....	27
5.3.	Rear Display PCB (Top).....	30
5.4.	Rear Display PCB (Bottom).....	30

6. Error Messages & Solution.....33
7. Part Order List.....34

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/PR PLUS Service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)