



PR-T SERVICE MANUAL

< Table of Contents >

1.	Introduction	3
1.1.	Preface	3
1.2.	Precaution	3
1.3.	Specifications	4
1.4.	Dimension	5
1.5.	Key & Symbols	6
1.6.	SealingMethod	7
2.	Calibration.....	8
2.1.	General Calibration	8
2.1.1.	C4 Setting C4-1 Setting.....	9
2.1.2.	SPAN Calibration Setting (C-3)..... 오류! 책갈피가 정의되어 있지 않습니다.	
2.1.3.	Gravity Constant Value Setting (C-9)	12
2.1.4.	Calibration factor Setting (C-10).....	12
2.1.5.	Displaying Real A/D Value (C-5).. 오류! 책갈피가 정의되어 있지 않습니다.	
2.1.6.	Input Function Key Code (C-6)	오류! 책갈피가 정의되어 있지 않습니다.
2.1.7.	Percent Calibration (C-7)..... 오류! 책갈피가 정의되어 있지 않습니다.	
2.1.8.	Battery Calibration (C-8)	오류! 책갈피가 정의되어 있지 않습니다.
3.	Error Messages & Solution.....	15
4.	The Schematics and Diagram.....	16
4.1.	System Block Diagram	16
4.2.	Circuit Diagram.....	17
4.2.1.	Main.....	17
4.2.2.	Power Part	18
4.2.3.	Key Part	19
4.2.4.	Display Part	20
5.	Exploded View	21
5.1.	BODY	21
5.2.	Load Cell drawing	22
6.	Part	23
6.1.	Part Location	23
6.1.1.	Main PCB (Bottom).....	24
6.1.2.	Front Display PCB (Top).....	25
6.1.3.	Front Display PCB (Bottom).....	26
6.1.4.	Rear Display PCB (Top)	27
6.1.5.	Rear Display PCB (Bottom)	27
6.1.6.	Pole Display PCB (Top).....	28
6.1.7.	Pole Display PCB (Bottom).....	29
6.2.	Part Order List	30

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*