



SW-1S/1C SERVICE MANUAL

< Table of Contents >

1.	Introduction	3
1.1.	Preface	3
1.2.	Precaution	3
1.3.	Specifications	4
1.3.1.	SW-1S/1C Specifications	4
1.4.	Key	4
1.5.	Sealing Method	6
2.	Calibration	7
2.1.	General Calibration	7
2.1.2.	SPAN Calibration Setting (C-3)	8
2.1.3.	Gravity Constant Value Setting (C-9)	8
2.1.4.	Displaying Real A/D Value (C-5)	8
2.1.5.	How to confirm SPAN calibrated A/D value (C-1)	9
2.1.6.	Back to the normal weighing mode (C-0)	9
2.1.7.	Calibration Block Diagram	10
3.	The Schematics and Diagram	11
3.1.	System Block Diagram	11
3.2.	Circuit Diagram	12
3.2.1.	Main	12
3.2.2.	A/D	13
4.	Exploded View	14
5.	Part Location	15
5.1.	Main PCB (Front)	15
5.2.	Main PCB (Rear)	16
5.3.	Rear PCB	17
6.	Error Messages & Solution	18
6.1.	Beep: Re-zero	18
6.2.	Err: Initial Zero	18
6.3.	Init: Failure of Analog Module	18
6.4.	UNSTA: A/D Value Unstable	18

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net