



Manual

SW-1S/1C/1W Service

SW-1S/1C/1W SERVICE MANUAL

(Revision 0.1 / 2008.06.17)

< Table of Contents >

1.	Introduction	3
1.1.	Preface	3
1.2.	Precaution	3
1.3.	Specifications	4
1.4.	Key	6
1.5.	Dimension	6
1.6.	Sealing Method	8
2.	Calibration	10
2.1.	General Calibration	10
2.1.1.	C4 Setting	11
2.1.1.1.	C4-1 Setting	11
2.1.1.2.	C4-3 Setting	11
2.1.2.	SPAN Calibration Setting (C-3)	12
2.1.3.	Gravity Constant Value Setting (C-9)	12
2.1.4.	Calibration factor Setting (C-10)	12
2.1.5.	Displaying Real A/D Value (C-5)	13
2.1.6.	Percent Calibration (C-7)	14
2.1.7.	Battery Calibration (C-8)	14
3.	The Schematics and Diagram	15
3.1.	System Block Diagram	15
3.2.	Circuit Diagram	16
3.2.1.	Main PCB	16
3.2.2.	Power Part (Main PCB) 오류! 책갈피가 정의되어 있지 않습니다.	
3.2.3.	Rear Display PCB	17
4.	Exploded View	18
5.	Load Cell drawing	20
6.	Part Location	21
6.1.	Main PCB (Top)	21
6.2.	Main PCB (Bottom)	22
6.3.	Rear Display PCB (Top)	23
7.	Error Messages & Solution	24
8.	Part List	25

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/SW-1S SW-1C SW-1W rev1 Service manual>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)