



# **SW-1S/1C SERVICE MANUAL**

## < Table of Contents >

|           |   |           |
|-----------|---|-----------|
| <b>1.</b> | <b>Introduction.....</b>                                    | <b>3</b>  |
| 1.1.      | <b>Preface.....</b>   | 3         |
| 1.2.      | <b>Precaution.....</b>                                      | 3         |
| 1.3.      | <b>Specifications.....</b>                                  | 4         |
| 1.3.1.    | <b>SW-1S/1C Specifications .....</b>                        | 4         |
| 1.4.      | <b>Key.....</b>   | 4         |
| 1.5.      | <b>Sealing Method.....</b>                                  | 6         |
| <b>2.</b> | <b>Calibration.....</b>                                     | <b>7</b>  |
| 2.1.      | <b>General Calibration .....</b>                            | 7         |
| 2.1.2.    | <b>SPAN Calibration Setting (C-3) .....</b>                 | 8         |
| 2.1.3.    | <b>Gravity Constant Value Setting (C-9) .....</b>           | 8         |
| 2.1.4.    | <b>Displaying Real A/D Value (C-5).....</b>                 | 8         |
| 2.1.5.    | <b>How to confirm SPAN calibrated A/D value (C-1) .....</b> | 9         |
| 2.1.6.    | <b>Back to the normal weighing mode (C-0) .....</b>         | 9         |
| 2.1.7.    | <b>Calibration Block Diagram .....</b>                      | 10        |
| <b>3.</b> | <b>The Schematics and Diagram.....</b>                      | <b>11</b> |
| 3.1.      | <b>System Block Diagram .....</b>                           | 11        |
| 3.2.      | <b>Circuit Diagram .....</b>                                | 12        |
| 3.2.1.    | <b>Main.....</b>  | 12        |
| 3.2.2.    | <b>A/D .....</b>  | 13        |
| <b>4.</b> | <b>Exploded View.....</b>                                   | <b>14</b> |
| <b>5.</b> | <b>Part Location.....</b>                                   | <b>15</b> |
| 5.1.      | <b>Main PCB (Front).....</b>                                | 15        |
| 5.2.      | <b>Main PCB (Rear) .....</b>                                | 16        |
| 5.3.      | <b>Rear PCB.....</b>  | 17        |
| <b>6.</b> | <b>Error Messages &amp; Solution.....</b>                   | <b>18</b> |
| 6.1.      | <b>Beep: Re-zero.....</b>                                   | 18        |
| 6.2.      | <b>Err: Initial Zero .....</b>                              | 18        |
| 6.3.      | <b>Init: Failure of Analog Module.....</b>                  | 18        |
| 6.4.      | <b>UNSTA: A/D Value Unstable.....</b>                       | 18        |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/SW-1S SW-1C rev2 Service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)