



**SERVICE MANUAL**  
**(SW-LR & ID-P)**  
(Revision 1.0 / 2006.03.22)

## < Table of Contents >

|           |  |          |
|-----------|--|----------|
| <b>1.</b> | <b>Introduction .....</b>                            | <b>3</b> |
| 1.1.      | Preface .....  | 3        |
| 1.2.      | Precaution.....                                      | 3        |
| 1.3.      | Specifications.....                                  | 3        |
| 1.4.      | Key.....   | 3        |
| 1.5.      | Sealing Method .....                                 | 3        |
| <b>2.</b> | <b>Calibration .....</b>                             | <b>3</b> |
| 2.1.      | General Calibration.....                             | 3        |
| 2.1.1.    | C4 Setting .....                                     | 3        |
| 2.1.1.1.  | C4-1 Setting.....                                    | 3        |
| 2.1.1.2.  | C4-2 Setting.....                                    | 3        |
| 2.1.1.3.  | C4-4 Setting.....                                    | 11       |
| 2.1.1.4.  | C4-6 Setting.....                                    | 3        |
| 2.1.2.    | SPAN Calibration Setting (C-3).....                  | 3        |
| 2.1.3.    | Gravity Constant Value Setting (C-9) .....           | 3        |
| 2.1.4.    | Displaying Real A/D Value (C-5) .....                | 3        |
| 2.1.5.    | How to confirm SPAN calibrated A/D value (C-1) ..... | 3        |
| 2.1.6.    | Linearity compensation.....                          | 3        |
| 2.1.7.    | Back to the normal weighing mode (C-0) .....         | 3        |
| 2.1.8.    | Calibration Block Diagram .....                      | 3        |
| <b>3.</b> | <b>The Schematics and Diagram.....</b>               | <b>3</b> |
| 3.1.      | System Block Diagram.....                            | 3        |
| 3.2.      | Circuit Diagram.....                                 | 3        |
| 3.2.1.    | Main PCB.....  | 3        |
| 3.2.2.    | A/D Part (Main PCB) .....                            | 3        |
| 3.2.3.    | Power Part (Main PCB) .....                          | 3        |
| 3.2.4.    | Power Input (Sub PCB) .....                          | 3        |
| 3.2.5.    | Rear Display PCB.....                                | 3        |
| <b>4.</b> | <b>Exploded View.....</b>                            | <b>3</b> |
| <b>5.</b> | <b>Part Location.....</b>                            | <b>3</b> |
| 5.1.      | Main PCB (Front) .....                               | 3        |
| 5.2.      | Main PCB (Rear) .....                                | 3        |
| 5.3.      | Rear PCB.....  | 3        |



Manual

- 5.3. Power PCB ..... 3
- 6. Error Messages & Solution..... 3
  - 6.1. Beep: Re-zero ..... 3
  - 6.2. Err: Initial Zero ..... 3
  - 6.3. Init: Failure of Analog Module ..... 3
  - 6.4. UNSTA: A/D Value Unstable..... 3
- 7. Part List..... 3

NOTE: This manual is over 50 pages long, the table of contents page numbers are incorrect, however this is the full manual.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/SW-LR> and ID-P service and calibration ma

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)