

REV : 01  
AUGUST 12, 1999

---

**SW SERIES**

---

**SERVICE MANUAL**

**C A S CORPORATION**

# THE CONTENTS

## CHAPTER-I THE GENERAL INTRODUCTIONS

A...PREFACE	3
B...THE PRECAUTIONS	3
C...SPECIFICATIONS	4
D...SEALING METHOD	5

## CHAPTER-II THE CALIBRATIONS

A...SET THE CALIBRATION MODE	6
B...HOW TO DISPLAY THE A/D VALUE	6
C...SPAN CALIBRATION	7
C.1..SPAN CALIBRATION	7
C.2..PERCENT CALIBRATION	8
C.3..TO CONFIRM THE SPAN AND TO DO FINE TRIMMING	8
D...HOW TO RETURN TO NORMAL MODE	9

## CHAPTER-III THE PART REPLACEMENTS

A...REPLACEMENT OF THE LOAD CELL	10
A.1..REPLACEMENT OF THE LOAD CELL	10
A.2..CORRECTION OF THE ECCENTRICITY	10
A.3..THE SPAN CALIBRATION	10

## CHAPTER-IV THE SCHEMATICS AND THE DIAGRAMS

A...MAIN CIRCUIT DIAGRAM	11
B...REAR CIRCUIT DIAGRAM	12
C...WIRING DIAGRAM	13
D...PARTS LOCATION	15

## CHAPTER-V THE ERROR MESSAGES

A...THE ERROR MESSAGES	18
------------------------	----

## CHAPTER-VI FULL PARTS LIST

A...EXPLODED VIEW	19
B....FULL PARTS LIST	20

## APPENDIX ~ DEVICE SPECIFICATION

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)