

**REV : 01**  
**JULY 31, 1999**

# **TP SERIES**

Service Manual

**CAS CORPORATION**

## CONTENTS

### CHAPTER- I THE GENERAL INTRODUCTIONS

A.... PREFACE .....	3
B.... THE PRECAUTIONS .....	3
C.... SPECIFICATIONS .....	4
D.... SEALING METHODD .....	5

### CHAPTER- II THE CALIBRATIONS

A.... SET THE CALIBRATION MODE .....	6
A.1.. SPAN CALIBRATION .....	7
A.2.. PERCENT CALIBRATION .....	8
A.3.. TO CONFIRM THE SPAN AND TO DO FINE TRIMMING .....	8
A.4.. HOW TO RETURN TO NORMAL MODE .....	8

### CHAPTER-III THE PART REPLACEMENTS

A.... REPLACEMENT OF THE LOAD CELL .....	10
A.1.. REPLACEMENT OF THE LOAD CELL .....	10
A.2.. CORRECTION OF THE ECCENTRICITY .....	10

### CHAPTER-IV THE TRANSFORMER

A.... THE TRANSFORMER .....	11
-----------------------------	----

### CHAPTER- V THE SCHEMATICS AND THE DIAGRAMS

A.... MAIN CIRCUIT DIAGRAM .....	12
B.... DISPLAY CIRCUIT DIAGRAM .....	13
C.... WIRING DIAGRAM .....	14
D.... PARTS LOCATION .....	16

### CHAPTER-VI FULL PARTS LIST

A.... FULL PARTS LIST .....	30
-----------------------------	----

### APPENDIX-I

A.... INPUT CODE FOR THE DIGITAL MODULE .....	45
A.1.. INPUT FOR THE SOFT KEY CODES .....	45
A.2.. INPUT FOR WEIGHING CONDITION CODES .....	47
A.3.. THE SPAN CALIBRATION .....	47

### APPENDIX-II DEVICE SPECIFICATIONS

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)