




RD2

Remote Display

INSTALLATION MANUAL

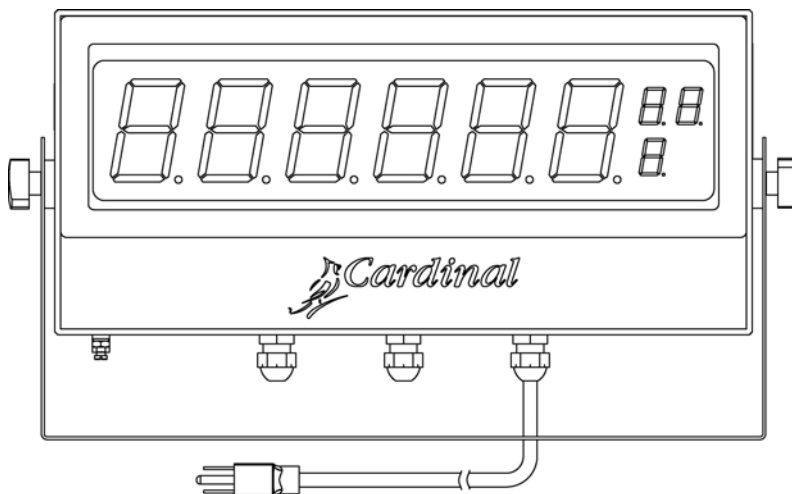

3601-M511-O1 Rev B
05/10

PO Box 151 • Webb City, MO 64870
Ph: 417-673-4631 • Fax: 417-673-5001
www.cardinalscale.com

Printed in USA

Technical Support: Ph: 866-254-8261 • techsupport@cardet.com

TABLE OF CONTENTS

INTRODUCTION	Page 1
SPECIFICATIONS	Page 1
SPECIAL FEATURES	Page 1
INDICATOR COMPATIBILITY	Page 1
AUTO-FORMAT FEATURE	Page 2
MULTIPLE DISPLAYS	Page 2
SITE PREPARATION	Page 2
INSTALLATION	Page 3
Unpacking	Page 3
Mounting	Page 3
SERIAL CABLE INSTALLATION	Page 4
RS232	Page 4
20mA Current Loop	Page 4
20mA CURRENT LOOP CONNECTIONS	Page 5
CURRENT Cardinal Indicators	Page 5
RETIRED Cardinal Indicators	Page 5
DISPLAY BOARD	Page 6
Switches	Page 6
Connectors	Page 6
Jumpers	Page 6
SETUP AND CONFIGURATION	Page 7
DISPLAY BRIGHTNESS	Page 8
RE-INSTALLING THE REAR PANEL	Page 8
ANNUNCIATOR DISPLAY	Page 9
SINGLE AND MULTIPLE DISPLAY CONNECTIONS	Page 10
ERROR AND STATUS DISPLAYS	Page 11
PART IDENTIFICATION	Page 12

SERIAL NUMBER _____ DATE OF PURCHASE _____ PURCHASED FROM _____ _____ _____ _____ _____ _____ RETAIN THIS INFORMATION FOR FUTURE USE
--

PRECAUTIONS

Before using this instrument, read this manual and pay special attention to all "WARNING" symbols:

 <p>IMPORTANT</p>	 <p>ELECTRICAL WARNING</p>	 <p>STATIC SENSITIVE</p>
---	--	---

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/cardinal/RD-2 Remote Display installation manual](https://the-checkout-tech.com/manuals/cardinal/RD-2%20Remote%20Display%20installation%20manual)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)