



# DC-100

## Counting Scale

Version 1.27

Preliminary Draft 6/8/04

# Operation Manual



# Contents

---

<b>1.0 Introduction.....</b>	<b>1</b>
1.1 Capacities and Resolutions .....	1
1.2 Modes of Operation .....	3
1.2.1 Description of Modes of Operation .....	3
1.3 Keyboard and Display.....	5
1.3.1 Annunciators .....	5
1.3.2 Key Functions .....	5
<b>2.0 Installation .....</b>	<b>8</b>
2.1 Unpacking .....	8
2.2 Repacking .....	9
2.3 Setting Up .....	9
2.4 Powering Up the DC-100.....	9
2.5 Battery Installation .....	10
2.6 Start-Up Screens .....	12
2.7 Setting Time and Date .....	13
<b>3.0 Configuration Settings .....</b>	<b>14</b>
3.1 Configuring Specification 141 and 142 Settings from the Scale Keyboard .....	14
3.1.1 Customer Specification (141 Settings) .....	14
3.1.2 Weight and Measurement Specification (142 Settings).....	18
<b>4.0 Calibration.....</b>	<b>24</b>
<b>5.0 Scale Operations.....</b>	<b>27</b>
5.1 Weight Unit Switching .....	28
5.2 Entering Tare Weights .....	28
5.2.1 One-Touch Tare, Tare Unknown.....	28
5.2.2 Digital Tare, Tare Weight Known .....	28
5.2.3 Tare Addition or Subtraction .....	29
5.2.4 Tare Exchange .....	29
5.3 Toggling Between Gross and Net .....	29
5.4 Entering Unit Weights .....	30
5.4.1 Unit Weight Operation by Sampling .....	30
5.4.2 Unit Weight Operation by Key Entry .....	31
5.5 Part Accumulation and Negative Counting – Without Recalling an Item Code .....	32
5.5.1 Part Accumulation .....	32
5.5.2 Negative Counting .....	32
5.5.3 Clearing Accumulated Data .....	33
5.6 Toggle Between Scales .....	33
5.7 Adding Parts To and Subtracting Parts From Inventory .....	33
5.7.1 Adding Parts to Inventory.....	33
5.7.2 Subtracting Parts From Inventory.....	34
5.7.3 Sample, Count and Print a Label .....	34
5.7.4 Scan ID Bar Code, Count and Print a Label .....	34
<b>6.0 Scale Programming .....</b>	<b>35</b>
6.1 Item Code Storage .....	35
6.1.1 Checking Memory Status .....	36
6.1.2 Program ID Code, Unit Weight, Tare Weight, Label Format, Part Name, Part Number, Lot Number, Location, Inventory Quantity, Threshold, and Setpoints.....	36

6.1.3 Delete Item Memory .....	38
6.2 Using Item Codes in Normal or Operation Mode .....	38
6.2.1 Recalling Numeric Item Codes using Item Code Number .....	38
6.2.2 Re-Computing Item Code Unit Weight .....	39
6.2.3 Quick Add Item to Memory .....	39
6.2.4 Tare Override .....	39
6.2.5 Inventory Operations Related to the Item Code Quantity .....	39
6.2.6 Delete Item Memory .....	40
6.3 Setting Tare in Operation Mode .....	41
6.3.1 One Touch Tare .....	41
6.3.2 Digital Tare (When Tare Weight is Known in Advance) .....	41
6.3.3 Tare Value Exchange (Tare Addition or Subtraction) .....	41
6.4 Setting a Lot Number .....	42
6.5 Setting a Sequence Number .....	42
<b>7.0 External Printers, Barcode Scanners, Keyboards and Platforms .....</b>	<b>43</b>
7.1 Connecting External Printers .....	43
7.1.1 SPEC Settings for External Printers .....	43
7.1.2 Connecting the Printer to the RS-232C Port .....	43
7.1.3 Eltron Printers .....	44
7.1.4 Epson Printers .....	45
7.2 Connecting a Barcode Scanner .....	45
7.2.1 Header Codes .....	46
7.2.2 Z Commands via Barcodes .....	47
7.2.3 Configuring the RS232C Port for a Scanner .....	47
7.2.4 Connecting the Scanner to the RS232C Port .....	47
7.2.5 Configuring the Keyboard Port for a Scanner .....	47
7.2.6 Programming the QSC-6000 Plus Quickscan RS232C Scanner .....	48
7.2.7 Programming the QuickScan Keyboard Wedge Scanner .....	53
7.3 Connecting the IBM Keyboard .....	54
7.4 Connecting an External Platform .....	55
<b>8.0 Job Sequence Programming .....</b>	<b>56</b>
8.1 General Instructions .....	56
8.2 Example of Job Sequence Programming .....	57
8.3 Modifying a Job Sequence Step .....	57
8.4 Deleting a Job Sequence Step .....	58
<b>9.0 Password Protecting the Programming Functions.....</b>	<b>59</b>
9.1 How to Program a Password .....	59
9.2 How to Use a Password .....	59
9.3 How to Change or Delete a Password .....	59
<b>10.0 DC-100 Error Message List .....</b>	<b>61</b>
<b>11.0 DC-100 Limited Warranty.....</b>	<b>63</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*