



DC-200/300

Counting Scale

Version 21.51

Operation Manual



Contents

About This Manual	1
1.0 Introduction.....	1
1.1 Capacities and Resolutions	1
1.2 Modes of Operation.	3
1.2.1 Description of Modes of Operation	3
1.3 Keyboard and Display	5
1.3.1 Annunciators.	5
1.3.2 Key Functions.	5
2.0 Installation	8
2.1 Unpacking	8
2.2 Repacking	9
2.3 Setting Up	9
2.4 Powering Up the DC-200/300	9
2.5 Setting Time and Date	10
2.6 Battery Installation (DC-200 only)	11
3.0 Configuration Settings	13
3.1 Configuring Specification 141 and 142 Settings from the Scale Keyboard	13
3.1.1 Customer Specification (141 Settings).	13
3.1.2 Weight and Measurement Specification (142 Settings)	20
3.2 Configuring Spec 141 and 142 Settings Using the Spec Upload Utility	25
3.2.1 Change Spec Settings Using the Spec Upload Utility	25
3.2.2 Uploading Saved Spec Configurations to a DC-200/300.	29
4.0 Calibration	33
5.0 Scale Operations.....	36
5.1 Weight Unit Switching	37
5.2 Toggle Between Scales	37
5.3 Setting Tare Weights in Operation Mode	37
5.3.1 One Touch Tare (When the Tare Weight is Unknown)	37
5.3.2 Digital Tare (When Tare Weight is Known in Advance).	37
5.3.3 Tare Addition or Subtraction	38
5.3.4 Tare Exchange or Override	38
5.4 Toggling Between Gross and Net	38
5.5 Entering Unit Weights	39
5.5.1 Unit Weight Operation by Sampling.	40
5.5.2 Unit Weight Operation by Key Entry	40
5.6 Setting the Default Label Format (DC-300 only)	40
5.7 Setting a Lot Number	41
5.8 Setting a Sequence Number (DC-300 only)	41
5.9 Changing the Factory Name (DC-300 only)	42
5.10 Operations Without Recalling an ID Code.	42
5.10.1 Using Item Codes and Part Names Without Storing Them to Memory	42
5.10.2 Part Accumulation and Negative Counting - Without Recalling an Item Code	43



Technical training seminars are available through Rice Lake Weighing Systems. Course descriptions and dates can be viewed at www.rlws.com or obtained by calling 715-234-9171 and asking for the training department.

5.10.3	Sample, Count and Print a Label	44
5.10.4	Scan ID Bar Code, Count, and Print a Label	44
5.11	Using Item Codes in Normal or Operation Mode	45
5.11.1	Recalling Item Codes using Item Code Number	45
5.11.2	View Item Information	45
5.11.3	Re-Computing Item Code Unit Weight	46
5.11.4	Quick Add Item to Memory	46
5.11.5	Adding Parts To and Subtracting Parts From Inventory	47
5.11.6	Delete Item Memory	48
6.0	Scale Programming	49
6.1	Item Code Storage	49
6.1.1	Checking Memory Status	50
6.1.2	Program ID Code, Unit Weight, Tare Weight, Label Format, Part Name, Part Number, Lot Number, Location, Inventory Quantity, Threshold, Setpoints, Address Number 50	50
6.1.3	View Item Codes in Memory	52
6.1.4	Delete Item Memory	52
6.2	Uploading and Downloading Items Between the Scale and a Computer	52
6.2.1	Item Database File Format	53
6.2.2	Installing the DC-300 Utility Program	54
6.2.3	Item Uploading From the Scale	58
6.2.4	Item Downloading To the Scale	60
7.0	Printing Labels (DC-300 only)	64
7.1	Thermal Label Printer	64
7.1.1	Available Label Types	64
7.1.2	Label Format Samples	65
7.1.3	Character Sizes Available for Printing	70
7.1.4	Label and Paper Roll Set-Up	71
7.1.5	Cleaning the Thermal Printer Head	72
7.1.6	Checking or Rezeroing the Thermal Head Usage Counter	72
7.1.7	Adjusting Printing Position	73
7.1.8	Turning On and Off the Internal Printer	73
7.2	Programming Fields for Label Printing	74
7.2.1	Programming Factory Name Files	74
7.2.2	Programming Address Files	75
7.2.3	Programming Text Files	77
7.2.4	Programming Logo Files	79
7.3	DC-300 Label Format Editor	82
7.3.1	Installing the DC-300 Label Format Editor Software	82
7.3.2	Formatting a Label With the DC-300 Label Format Editor Software	84
7.3.3	Saving and Uploading a Label Format	87
7.4	Manual Printing of Labels	90
7.4.1	Issuing an Item Label or Receipt	90
7.4.2	Issuing a Total Label or Receipt	90
7.5	Free Format Label Programming	91
7.5.1	General Label Parameters	91
7.5.2	Print Area, Print Position and Print Angles	91
7.5.3	Kinds of Data That Can Be Included on a Free Format Label	92
7.5.4	Item and Total Labels	92
7.5.5	Programming Data Layout for Free Format Labels	95
7.5.6	Checking Your Free Format Programming Layout	96
7.5.7	Example of Free Format Programming by Modifying an Existing Format	97
7.5.8	Delete a Free Format File	100
7.6	Changing Label Formats	101
7.6.1	Change Label Format Associated With an Individual Item Code	101
7.6.2	Change the Default Label Type	102
7.6.3	Change the NON-ID Label Type	102
7.6.4	Change All Label Types Temporarily	102
7.7	Using External Printers	102

8.0	Job Sequence Programming	103
8.1	General Instructions	103
8.2	Example of Job Sequence Programming	103
8.3	Modifying a Job Sequence Step	104
8.4	Deleting a Job Sequence Step	104
9.0	Reports	105
9.1	Available Reports	105
9.2	Item Reports	106
9.2.1	One Item Report	106
9.2.2	All Item Print	107
9.3	Inventory Reports	108
9.3.1	Threshold Report	108
9.3.2	In/Out Count Report	108
9.3.3	Clearing the In/Out Count Register	109
9.4	Shelf Location Label Print (DC-300 only)	110
9.5	Programming Reports (DC-300 only)	111
9.5.1	Factory Name Report (DC-300 only)	111
9.5.2	Address File Report (DC-300 only)	112
9.5.3	Text File Report (DC-300 only)	113
9.5.4	Logo File Report (DC-300 only)	114
9.5.5	Label Layout Test Report (DC-300 only)	114
9.5.6	Free Format Label Layout Data Report (DC-300 only)	114
10.0	Password Protecting the Programming Functions	115
10.1	How to Program a Password	115
10.2	How to Use a Password	115
10.3	How to Change or Delete a Password	115
11.0	Network Connection	117
11.1	Checking the Scale's IP Address	117
11.2	Machine Setup Utility	117
11.3	Changing the IP Address Directly on the Scale	118
11.4	Ethernet Cable Connection Between the Scale and the Computer	118
11.5	Setting the Computer's Network Communication	118
11.6	Entering the Data Transfer Mode on the Scale	120
11.7	Exiting The Data Transfer Mode on the Scale	121
12.0	Appendix	122
12.1	DC-200/300 Error Message List	122
12.2	Interface Ports	124
12.2.1	Overview of Interface Ports	124
12.2.2	Spec Settings for Interface Ports	124
12.2.3	Connection from Scale to PC via the RS-232 Port	128
12.2.4	Connection from Scale to PC via Ethernet Port	129
12.2.5	Connection from Scale to Printer	129
12.2.6	Connection From Scale to Remote Platform	131
12.3	Connecting an IBM Keyboard	131
12.4	Connecting a Barcode Scanner	132
12.4.1	Header Codes	133
12.4.2	Z Commands via Barcodes	134
12.4.3	Configuring the RS232C Port for a Scanner	134
12.4.4	Connecting the Scanner to the RS232C Port	134
12.4.5	Configuring the Keyboard Port for a Scanner	134
12.4.6	Programming the QSC-6000 Plus Quickscan RS232C Scanner	135
12.4.7	Programming the QuickScan Keyboard Wedge Scanner	140
12.5	Label Formatting Worksheets (DC-300 only)	141
12.6	Character Code Tables	160
12.6.1	ASCII Code	160

12.6.2	Teraoka Codes	162
13.0	DC-200/300 Limited Warranty	163

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Digi/DC-200 and DC-300 operation manual.html](https://the-checkout-tech.com/manuals/Digi/DC-200%20and%20DC-300%20operation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)