



# DC-200/300

*Counting Scale*

*Version 1.37*

# Service Manual



<b>1.0 Overview</b>	<b>2</b>
1.1 DC-200/300 Specifications	2
1.2 Keyboard and Display	3
1.2.1 Annunicators	4
1.2.2 Key Functions	4
1.3 Interface Ports	7
1.4 Capacities and Resolutions	7
<b>2.0 Installation</b>	<b>8</b>
2.1 Unpacking	8
2.2 Repacking	9
2.3 Setting Up	9
2.4 Powering Up the DC-200/300	9
2.5 Initialize Scale Specifications	10
2.6 Start-Up Screens	11
2.7 Calibration (Span Adjustment)	12
2.8 Setting Time and Date	15
2.9 Configuration Settings	15
2.9.1 Configuring Specification 141 and 142 Settings from the Scale Keyboard	15
2.9.2 Configuring Spec 141 and 142 Settings Using the Spec Upload Utility	27
2.10 Modes of Operation	36
<b>3.0 Maintenance</b>	<b>37</b>
3.1 Hardware Testing	37
3.1.1 RAM and Communications Port Testing	37
3.1.2 Internal Test Count	41
3.1.3 Span Switch Status Test	41
3.1.4 Voltage Checkpoints	41
3.2 Internal Printer Tests and Adjustments (DC-300 only)	42
3.2.1 Checking or Rezeroing the Thermal Head Usage Counter	42
3.2.2 Adjusting the Printer Label Gap Sensor	43
3.2.3 Adjusting the Printing Position	45
3.3 Clearing the Scale Memory	45
3.4 Technical Drawings	47
3.4.1 DC-300 Exploded View	47
3.4.2 DC-300 Block Diagram	48
3.4.3 DC-200 Block Diagram	49
<b>4.0 Assembly/Disassembly of the DC-200/300</b>	<b>50</b>
4.1 Removing the Main Cover	50
4.2 Disconnecting the Display Board	51
4.3 Disconnecting the Keyboard Circuit Board	52
4.4 Removing the Interface Main Board	53
4.5 Removing the Printer Drawer Block (DC-300 only)	54
4.6 Removing the Thermal Print Head (DC-300 only)	55
<b>5.0 Network and Interfaces: External Printers</b>	<b>57</b>
5.1 Connecting an External Printer to the Scale	57
5.1.1 Spec Settings for External Printers	57
5.1.2 Connecting the Printer to the RS-232C Port	58
5.2 Eltron Printers	59
5.2.1 Set the Computer Serial Port	59
5.2.2 Designing a Label	60
5.2.3 Saving the Label Format You Have Made	64

---

5.2.4 Downloading the Label Format From the Computer to the Eltron Printer .....	67
5.2.5 Predesigned Label Formats for Eltron Printers .....	68
5.2.6 Testing to See What Label Format or Graphic is in the Eltron Printer's Memory .....	73
5.2.7 Printing to the Eltron Printer from the DC-200/300 Scale .....	75
5.3 Epson Printers .....	76
<b>6.0 Network and Interfaces: Connection to a PC .....</b>	<b>77</b>
6.1 Ethernet Connection .....	77
6.1.1 Checking the Scale's IP Address.....	77
6.1.2 Machine Setup Utility.....	77
6.1.3 Changing the IP Address Directly on the Scale .....	78
6.1.4 Ethernet Cable Connection Between the Scale and the Computer .....	79
6.1.5 Setting the Computer's Network Communication .....	79
6.1.6 Entering the Data Transfer Mode on the Scale.....	81
6.1.7 Exiting The Data Transfer Mode on the Scale .....	82
6.1.8 Pinging the Scale to Test the Ethernet Connection .....	83
6.2 RS-232 Connection .....	84
6.2.1 Spec Settings for RS-232C Connection to a PC .....	84
6.2.2 Connecting the PC to the RS-232C Port .....	85
6.2.3 Configuring Communication Between the Scale and the Computer .....	86
6.2.4 Setting HyperTerminal to Capture Data Coming From the Scale.....	86
6.2.5 Sending Data from the Scale to HyperTerminal .....	87
6.2.6 Scale Data Header Codes .....	87
6.2.7 Requesting Data From the Scale Using HyperTerminal .....	88
<b>7.0 Network and Interfaces: Scanners, Keyboards, Balances.....</b>	<b>89</b>
7.1 Connecting an IBM Keyboard .....	89
7.2 Connecting a Barcode Scanner .....	90
7.2.1 Header Codes.....	90
7.2.2 Z Commands via Barcodes .....	91
7.2.3 Configuring the RS-232C Port for a Scanner .....	91
7.2.4 Connecting the Scanner to the RS-232C Port .....	92
7.2.5 Configuring the Keyboard Port for a Scanner .....	92
7.2.6 Programming the QSC-6000 Plus Quickscan RS-232C Scanner .....	93
7.2.7 Programming the QuickScan Keyboard Wedge Scanner.....	98
7.3 Connecting a Force Balance .....	99
7.3.1 Spec Settings for Force Balance .....	99
7.3.2 Connecting the Force Balance to the RS-232C Port .....	100
<b>8.0 Firmware Upgrade .....</b>	<b>101</b>
8.1 Determining Your Current Firmware Version Number .....	101
8.2 Installing the WinDload Software .....	101
8.3 Setting Up the WinDload Software .....	104
8.4 Connecting the DC-200/300 Scale to the Computer .....	108
8.5 Downloading Firmware to the Scale .....	109
<b>9.0 Appendix .....</b>	<b>112</b>
9.1 DC-200/300 Error Message List .....	112
9.2 Appendix - Rezero Functions .....	114
9.3 Character Code Tables .....	116
9.3.1 ASCII Code .....	116
9.3.2 Teraoka Codes .....	118

---

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Digi/DC-200 and DC-300 service manual.html](https://the-checkout-tech.com/manuals/Digi/DC-200%20and%20DC-300%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)