



DC-782

Counting Scale

Version 1.006

Operation Manual



RICE LAKE[®]
WEIGHING SYSTEMS
To be the best by every measure[®]

Contents

- About This Manual 1**
- 1.0 Introduction..... 1**
 - 1.1 Capacities and Resolutions 1
 - 1.2 Modes of Operation 1
 - 1.3 Keyboard and Display 2
 - 1.3.1 Display Specifications 2
 - 1.3.2 Indicator Lamps 2
 - 1.3.3 Key Functions 3
- 2.0 Installation 5**
 - 2.1 Unpacking 5
 - 2.2 Repacking 5
 - 2.3 Setting Up 5
 - 2.4 Powering Up the DC-782 6
 - 2.4.1 AC Power Source 6
 - 2.4.2 DC Battery Pack Replacement/Installation 7
 - 2.4.3 Battery Charging 8
 - 2.4.4 Start-Up Screens 8
 - 2.5 Replacement Parts 9
 - 2.6 Block Diagram of Electrical Connections 10
 - 2.7 Physical Layout of Electrical Connections 11
- 3.0 Configuration Settings 12**
 - 3.1 Putting the Scale in Maintenance Mode 12
 - 3.2 Configuring Specification 141 and 142 Settings from the Scale Keyboard 12
 - 3.2.1 Customer Specification (141 Settings) 12
 - 3.2.2 Weight and Measurement Specifications (142 Settings) 14
- 4.0 Calibration 17**
- 5.0 Scale Operations..... 19**
 - 5.1 Counting Scale Accuracy 19
 - 5.2 Setting Tare Weights in Weighing Mode 19
 - 5.2.1 One Touch Tare (When the Tare Weight is Unknown) 20
 - 5.2.2 Digital Tare (When Tare Weight is Known in Advance) 20
 - 5.2.3 Tare Addition or Subtraction 20
 - 5.3 Entering Unit Weights 20
 - 5.3.1 Unit Weight Operation by Sampling 21
 - 5.3.2 Unit Weight Operation by Key Entry 21
 - 5.4 Operations Without Recalling an Item Code 22
 - 5.4.1 A Single Counting Operation - Without Recalling an Item Code 22
 - 5.4.2 Part Accumulation or Subtraction and Negative Counting - Without Recalling an Item Code 22
 - 5.5 Using Item Codes in Weighing Mode 24
 - 5.5.1 Recalling Item Codes using Item Code Number 24
 - 5.5.2 Delete Item Memory 24
- 6.0 Scale Programming 25**
 - 6.1 Checking Memory Status 25
 - 6.2 Program Item Code, Tare Weight, Unit Weight, Setpoint 1 and 2 25



Technical training seminars are available through Rice Lake Weighing Systems. Course descriptions and dates can be viewed at www.ricelake.com or obtained by calling 715-234-9171 and asking for the training department

6.3	Program a General Setpoint	27
6.4	Programming a Preset Key	27
6.5	Delete Item Memory	28
7.0	RS-232C Communication with PC	29
7.1	Connection	29
7.2	General Specifications of the RS-232C Interface	29
7.3	Setting the Scale Specifications for Communication to a PC	29
7.4	Communication Method	30
7.4.1	Standard Stream Data Transmission (Continuous)	30
7.4.2	Standard Manual Data Transmission	31
7.4.3	Standard Command Data Transmission	32
7.5	Characters That Can Be Transmitted by RS-232C	32
7.6	RS-232C Data Transmission Formats	33
1.0	Appendix	37
1.1	DC-782 Specifications	37
1.2	DC-782 Error Message List	38
2.0	DC-782 Limited Warranty	39

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*