



DI-10

Check Weighing Scale

Operation Manual

DI-10 OPERATION MANUAL

SECTION	CONTENTS	PAGE NUMBER
1.0.	<u>GENERAL</u>	2-5
1.1.	DESCRIPTION	2
1.2.	APPEARANCE	3
1.3.	DISPLAY & KEYS	4
1.4.	INDICATOR LAMPS	5
2.0.	<u>INSTALLATION</u>	6-9
2.1.	UNPACKING	6
2.2.	INSPECTING	6
2.3.	REPACKAGING	6
2.4.	UNLOCKING (DIGI GRAND)	6-8
2.5.	DI-10 POLE ASSEMBLY	9
3.0.	<u>SPECIFICATIONS</u>	10-15
3.1.	CAPACITIES	10
3.2.	TECHNICAL	11
3.3.	SET-UP PROCEDURE	12-13
3.4.	FEATURES	14-15
4.0.	<u>OPERATION INSTRUCTION.</u>	16-24
4.1.	POWER ON	16
4.2.	ONE TOUCH TARE	17
4.3.	DIGITAL TARE	18
4.4.	DIGITAL TARE WHILE WEIGHING	19
4.5.	SET POINTS	20-21
4.6.	ADDITION AND SUBTRACTION	22
4.7.	COUNTING.	23
4.8.	NET/GROSS DISPLAY	23
4.9.	DATE & TIME SETTING	24
4.10.	LB/KG CONVERSION	24
5.0.	<u>DI-10 OPTIONAL EQUIPMENT</u>	25-30
5.1.	PRINTER	25
5.2.	SETPOINT OUTPUT.	26-27
5.3.	RS-232C DATA OUT	28-30
5.4.	AC/DC ADAPTOR.	30
6.0.	<u>MAINTENANCE, CALIBRATION, TEST PROCEDURE & SERVICE</u>	31-39
6.1.	MAINTENANCE PROCEDURES	31-32
6.2.	SERVICE & REPAIR	32
6.3.	PLATFORM WIRING	32
6.4.	ERROR MESSAGE LIST	33
6.5.	SPEC. LIST	34-36
6.6.	CALIBRATION	37-38
	NOTES:	39

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*