



# OPERATION MANUAL

**Model: DI-162**

Edition	Month	Year
1st	November	2005
2nd	March	2006
3rd	May	2006
4th	June	2006
5th	Dec.	2007

**SHANGHAI TERAOKA ELECTRONIC Co., Ltd.** --- Technical Support Dept.  
3rd Floor of 2nd Building, Jia Yuan Business Center,  
51# Long Wu Road, Shanghai China 200232.

Tel: +86-21-64085151 Fax: +86-21-64083468 E-mail: [steservice@digi-scale.com](mailto:steservice@digi-scale.com)

---

# CONTENTS

## 1. General Specification

1.1. General Layout -----	1
1.2. Features -----	4
1.3. Operating Conditions -----	5
1.4. Charging Conditions -----	5
1.5. Analog Specification -----	5
1.6. Display and Indicators -----	6
1.7. Dimensions -----	10
1.8. External Connectors -----	10

## 2. Main Operation

2.1. Zero Resetting -----	11
2.2. One-touch Tare Weight Reduction -----	12
2.3. Digital Tare Weight Reduction -----	12
2.4. Change Weight Unit -----	13
2.5. Span SW ON / OFF Check -----	13
2.6. Internal Count Display -----	14
2.7. Spec Data Setting For Weigh & Measure -----	14
2.8. Setpoint Set -----	16

## 3. Initial Setup

3.1. Prepare -----	17
3.2. Setup -----	17
3.2.1. Weight Calibration -----	18
3.2.2. G Calibration -----	20

## 4. Specification List ----- 21

## 5. Error Message ----- 25

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*