



DI-166SS

WEIGHING SCALE USER MANUAL



Teraoka Seiko Co., Ltd.

< Head office >

13-12 Kugahara 5-chome, Ohta-Ku, Tokyo 146-8580 Japan

TEL: +81-3-3752-2131, FAX: +81-3-3752-2801

< Ohsaki office >

2-3-13 Ohsaki, Shinagawa-Ku, Tokyo 141-8566 Japan

TEL: +81-3-5496-7600, FAX: +81-3-5496-7620

<http://www.digisystem.com> : [email:info@hq.digi.co.jp](mailto:info@hq.digi.co.jp)

CONTENT

- I . BEFORE USING THE SCALE**
- II . PREPARING TO USE THE SCALE**
- III . INTRODUCTION**
- IV . LED DISPLAY SYMBOLS**
- V . KEYBOARD FUNCTION**
- VI . GENERAL FUNCTION**
- VII . COUNTING FUNCTION OPERATION**
- VIII . CONNECTION OF INTERFACE**
- IX . MEANS OF POWER SUPPLY & CHARGING**
- X . CALIBRATION**
- XI . CONFIGURATION SETTINGS**
- XII . ERROR SIGNAL**
- XII . WARRANTY**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*