



DI-2855

Bench Scale

Operation Manual

RICE LAKE WEIGHING SYSTEMS

Industrial Solutions on a Global Scale®



74263

DI-28SS SERIES OPERATING MANUAL

| <u>SECTION</u> | <u>INDEX</u> | <u>PAGE NUMBER</u> |
|----------------|---|--------------------|
| 1.0. | <u>GENERAL</u> | 2 |
| | 1.1. Description | 2 |
| | 1.2. Warranty | 3 |
| 2.0. | <u>SPECIFICATIONS</u> | 4 |
| | 2.1. Platforms & Capacities | 4 |
| | 2.2. Technical | 5 |
| 3.0. | <u>INSTALLATION</u> | 6 |
| | 3.1. Unpacking | 6 |
| | 3.2. Inspection | 6 |
| | 3.3. Repackaging | 6 |
| 4.0. | <u>ELECTRICAL TEST</u> | 7 |
| | 4.1. Set-Up Procedure | 7 |
| | 4.2. Keyboard & Display Test | 7 |
| | 4.3. Control Panel | 8 |
| | 4.3.1. Lamps | 8 |
| | 4.3.2. Keys | 8 |
| 5.0. | <u>OPERATION PROCEDURE</u> | 9 |
| | 5.1. Power On | 9 |
| | 5.2. Tare Subtraction | 9 |
| | 5.2.1. One Touch Tare | 9 |
| | 5.2.2. Digital Tare | 9 |
| | 5.3. Battery Life Check | 10 |
| | 5.4. Set Point Value Entry | 11 |
| | 5.5. Changing Weight Units | 12 |
| 6.0. | <u>PROGRAMMING</u> | 13 |
| | 6.1. DI-28SS Key Function Summary | 13 |
| | 6.2. Internal Count | 14 |
| | 6.3. Set Up And Calibration | 15 |
| | 6.4. Specification List | 16-17 |
| | 6.5. Span Adjustment | 18-19 |
| | 6.6. Span Enable Switch | 20 |
| 7.0. | <u>DI-20 OPTIONS</u> | 21 |
| | 7.1. Battery Option | 21 |
| | 7.2. Set Point Output, & Setpoint Wiring | 21-22 |
| | 7.3. RS-232, RS-232 Wiring | 21 |
| | RS-232 Communication protocols | 22-30 |
| 8.0. | <u>MAINTENANCE, CALIBRATION, TEST PROCEDURE, SERVICE</u> | 31 |
| | 8.1. Maintenance Procedures | 31 |
| | 8.2. Service & Repair | 32 |
| | 8.3. Load Cell Wiring | 33 |

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*