



DI-80

Indicator

Operation Manual

CONTENTS

1. INTRODUCTION.....	3
1.1. Display.....	3
1.2. A/D Section.....	3
1.3. Item Memory.....	3
1.4. Environment.....	4
1.5. Interface	4
1.6. Option.....	4
2. CONFIGURATION	5
2.1. Dimensions	5
2.2. External Connectors	5
2.3. Control Panel.....	6
2.3.1. Keyboard Keys	6
2.3.2. Display Icons & Indicator Lamps	8
3. BASIC OPERATION.....	9
3.1. Tare Subtraction.....	9
3.1.1. Semi-Auto Tare Subtraction (One Touch Tare).....	9
3.1.2. Digital Tare Subtraction (Preset Tare).....	10
3.2. Gross Weight Display	11
3.3. Weight Unit Conversion	12
3.4. Dual Scale Function.....	13
3.5. Accumulation.....	14
3.6. Weight Hold Function.....	16
3.7. Animal Weighing Function.....	16
3.8. Setpoint Function.....	17
3.8.1. Setpoint Value Entry	18
3.9. Call Item Code in Weighing Mode	19
4. COUNTING OPERATION.....	20
4.1. Unit Weight Entry.....	20
4.1.1. Unit weight entry by sampling	20
4.1.2. Direct Entry by numeric keys	22
4.2. Accumulation of Counting Result	23
4.3. Call Item Code in Counting Mode	25
5. PROGRAM MODE.....	27
5.1. Item Memory.....	27
5.1.1. Alphanumeric Data Entry.....	28
5.1.2. Item Programming.....	30
5.2. Memory Edition and Deletion	33
5.2.1. Delete and edit a certain Item Code	33
5.2.2. Erase all Item data in memory.....	34
5.3. Review Item Code already in Memory.....	35
5.4. Date and Time	36

APPENDIX

APPENDIX I LIST OF ASCII DATA.....	38
APPENDIX II LIST OF TERAOKA CODE	39

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*