



SERVICE MANUAL

Model: DS-530

Edition	Month	Year
1 st	Oct	2002
2 nd		
3 rd		
4 th		

Shanghai Teraoka Electronic Co., Ltd. --- Technical Support Dept.

A. 7th Floor of HuiJia Building, 41# North CaoXi Road, XuHui District, Shanghai China 200030

Tel: +86-21-5490-1776 / 1778 / 1905 / 0063 Fax: +86-21-5490-4530 E-mail: steservice@digiscale.com

CONTENTS

1. General Specification	1
1.1. General Layout	1
1.2. Purpose	2
1.3. Features	2
1.4. Operating Condition	2
1.5. Analog Specification	2
1.6. Capacity / Minimum Graduation / Tare Range	3
1.7. Dimensions	3
1.8. External Connectors	3
1.9. Main Components	3
1.10. Existing parts to be used	3
2. General Layout	4
2.1. Key Function	4
2.2. Display & Indicators	4
3. Initial Setup	5
3.1. Location Of SPAN SW	5
3.2. Specification Setting	5
3.3. Internal Count and A/D Count	5
3.4. Specification Enter and Span Adjustment	6
3.5. Specification Setting List	6
4. Main Operation	7
4.1. Power On/Off	7
4.2. Automatic Shut Off Timer Setting	7
4.3. Weight Reset	7
4.4. One Touch Tare	7
5. Error Message	8
6. Hardware Detail	9
6.1. Microcomputer	9
6.2. Electrical Blocks Connection Diagram	11
6.3. Physical Connection Diagram	12
6.4. Circuitry Diagram	14

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Digi/DS-530 Service and calibration manual.html](https://the-checkout-tech.com/manuals/Digi/DS-530%20Service%20and%20calibration%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)