



SERVICE MANUAL

Model: DS-685L/F Series

| Edition | Month | Year |
|-----------------|-------|------|
| 1 st | March | 1996 |
| 2 nd | May | 1996 |
| 3 rd | April | 1997 |
| 4 th | March | 2002 |
| 5 th | | |

SHANGHAI TERAOKA ELECTRONIC CO., LTD. --- Technical Service Dept.

A. 7th Floor of HuiJia Building, 41# North CaoXi Road, XuHui District, Shanghai China 201505

Tel: +86-21-5490-1776 / 1778 / 1905 / 0063 Fax: +86-21-5490-4530 E-mail: steservice@digi-scale.com

CONTENT

| | |
|---|----|
| 1. General Specification | |
| 1.1. Model Specification ----- | 1 |
| 1.2. Features ----- | 1 |
| 1.3. Overall View ----- | 2 |
| 1.4. Dimension ----- | 3 |
| 1.5. Key-Sheet Layout ----- | 4 |
| 1.6. Key Function ----- | 4 |
| 1.6.1. Type A (8 Preset Keys) ----- | 4 |
| 1.6.2. Type B (14 Preset Keys) ----- | 4 |
| 1.7. Operation Condition ----- | 5 |
| 1.8. Charging Condition (For Rechargeable Battery Only) ----- | 5 |
| 1.9. Analog Specification ----- | 5 |
| 1.10. Main Components Used ----- | 5 |
| 1.11. Capacity / Minimum Graduation / Tare Range ----- | 6 |
| 1.11.1. DS-685L ----- | 6 |
| 1.11.2. DS-685F ----- | 6 |
| 2. Maintenance Mode | |
| 2.1. SPAN SW Location & Stopper Screws ----- | 7 |
| 2.2. Internal Count & A/D Count Display ----- | 7 |
| 2.3. SPAN Adjustment ----- | 8 |
| 2.4. Escape From Calibration Mode ----- | 8 |
| 2.5. Specification Setting Operation ----- | 9 |
| 2.5.1. User Specification Setting (141) ----- | 9 |
| 2.5.2. Specification Entry (142) ----- | 9 |
| 2.6. DS-685L Specification List (V1.26) ----- | 10 |
| 2.6.1. Customer Specification List (141) V1.26 ----- | 10 |
| 2.6.2. Weight & Measure Specification List (142) V1.26 ----- | 10 |
| 2.7. DS-685F Specification List (V1.06) ----- | 12 |
| 2.7.1. User Specification List (141) V1.06 ----- | 12 |
| 2.7.2. For Weight & Measure (142) V1.06 ----- | 12 |
| 2.8. Location of Sealing Screw ----- | 14 |
| 3. Error Message ----- | 15 |
| 4. Hardware Detail | |
| 4.1. DS-685L ----- | 16 |
| 4.1.1. NRFI Electrical Connection Block Diagram ----- | 16 |

| | |
|---|-----------|
| 4.1.2. RFI Electrical Connection Block Diagram ----- | 16 |
| 4.1.3. Microcomputer Pin Assignment ----- | 17 |
| 4.2. DS-685F ----- | 19 |
| 4.2.1. NRFI Electrical Connection Block Diagram ----- | 19 |
| 4.2.2. RFI Electrical Connection Block Diagram ----- | 19 |
| 4.2.3. Microcomputer Pin Assignment ----- | 20 |
| 5. Circuitry Diagram ----- | 22 |

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*