



DS-688

Bench Scale

Operation Manual

I. INTRODUCTION

1.1. Feature	2
--------------	---

II. GENERAL SPECIFICATION

2.1. Overall view	3
2.2. Dimension	4
2.3. Model specification	5
2.4. Operation condition	5
2.5. Main components used	5
2.6. Capacity / Minimum graduation / Tare range	6

III. INITIAL SETUP

3.1. Specification setting	
3.1.1. Specification entry (141)	7
3.1.2. Specification entry (142)	8
3.2. Specification list	
3.2.1. Specification list of DS-688 (Version 1.21)	9-11
3.2.2. Specification list of DS-688F (Version 1.00)	9-12
3.3. Key layout and function	
3.3.1. 6 preset key type	13-14
3.3.2. 12 preset key type	15
3.4. Location of sealing screw	16
3.5. Set up procedure	16

IV. ADJUSTMENTS

4.1. Span enable switch setting	17
4.2. Internal count and A/D count	17
4.3. Span adjustment	17
4.4. Escape from maintenance mode	18-19
4.5. Error message	20

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Digi/DS-688 operation manual.html](https://the-checkout-tech.com/manuals/Digi/DS-688%20operation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)