



SERVICE MANUAL

DS-688 SERIES

EDITION	MONTH	YEAR
1st	July	1997
2nd		
3rd		
4th		
5th		

SHANGHAI TERAOKA ELECTRONIC CO., LTD

INTERNATIONAL SERVICE SECT.

TING LIN INDUSTRIAL DEVELOPMENT ZONE, JIN SHAN DISTRICT, SHANGHAI, P. R.OF CHINA 201505

TEL: +86-21-57234888 FAX: +86-21-57233049

E-mail: jonnyzhu@online.sh.cn

CONTENT

I. INTRODUCTION

1. Feature	I-1
------------------	-----

II. SPECIFICATION

1. General specification	
1.1 Overall view	II-1
1.2 Dimension	II-2
1.3 Model specification	II-3
1.4 Operation condition	II-3
1.5 Main components used	II-3
1.6 Capacity / Minimum graduation / Tare range	II-4

III. INITIAL SETUP

1. Specification setting	
1.1 Specification entry (141)	III-1
1.2 Specification entry (142)	III-2
1.3 Specification list of DS-688 (Version 1.21)	III-3
1.4 Specification list of DS-688F (Version 1.00)	III-6
2. Key layout and function	
2.1 6 preset key type	III-9
2.2 12 preset key type	III-11
3. Location of sealing screw	III-12
4. Set up procedure	III-12

IV. ADJUSTMENTS

1. Span enable switch setting	IV-1
2. Internal count and A/D count	IV-1
3. Span adjustment	IV-1
4. Escape from maintenance mode	IV-2
5. Error message	IV-3

V. ELECTRICAL CIRCUITRY

1. DS-688	
2. DS-688F	

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Digi/DS-688 series service manual.html](https://the-checkout-tech.com/manuals/Digi/DS-688%20series%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)