


# DS - 788 USER'S GUIDE

#### DISPLAY & KEYBOARD PANEL

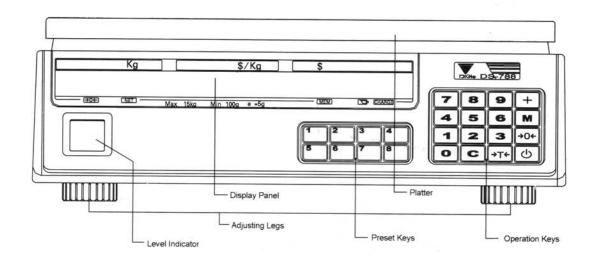

#### DISPLAY:

- \* Double side LED display.
- \*Weighing mode:
  - 5 digits for weight, 5 digits for unit price,
  - 6 digits for total price.
- \* Accumulation mode:
  - 4digits for accumulation number, 6digits for amount.
- \* Amount tendered mode:
  - 6digits for payable, 5 digits for payment, 5 digits for Change.

#### INDICATORS:

\* ZERO : Lights on when zero point is adjusted

and weight is stable.

\* NET : Lights on when tare subtraction is effective.

\* MEM : Lights on when amount accumulated.

\* \( \) : Lights on when battery is weak.

\* CHARGE: Lights on when battery is being charged.

#### PRE - OPERATION

#### 1) Level Adjustment

- a. Place scale on firm and flat base.
- b. Level the scale by turning adjusting legs until air bubble is at the center of the level indicator

#### 2) Power Supply

- a. When AC power is available, scale will use AC power only whatever rechargeable battery is installed or not.
- b. When AC power is shut off, scale will use battery automatically. If the battery is weak, the battery indicator will light up.
- c. Scale detects rechargeable battery voltage and control battery charge process automatically. The battery charge indicator lights up when rechargeable battery is being charged.

## OPERATION

### **FUNCTIONS**

#### **KEYS**

Turns the power on or off.

[→0←] Resets weight display to zero.

[ + ] Adds sum or accumulated sum.

[M] Enters into Preset Program mode

and Grand Total mode.

[→T←] Sets or clears tare value.

[C] Clears numerical values.

0-9 Input numerical values.

1 – 8 Set up or call either unit price.



Not Level



Level

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/Digi/DS-788 user guide manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM