

**Crane Scale**  
**OCX-XZL Series**



# Operation Manual

1<sup>st</sup> Edition  
June 2003



**Shanghai Teraoka Electronic Co., Ltd.**

TingLin Industrial Development Zone, JinShan District, Shanghai China 201505

Tel: +86-21-5723-4888 Fax: +86-21-5723-4090 <http://www.digi-scale.com>

## CONTENTS

1. General Specification -----	1
1.1. General -----	1
1.2. General Layout -----	1
1.3. Features -----	1
1.4. Operation Condition -----	2
1.5. Battery Charger -----	2
1.6. Optional -----	2
1.7. Analog Specification -----	2
1.8. Capacity & Increment -----	2
1.9. Key Function of Remote Controller -----	2
2. Setup & Maintenance -----	3
2.1. Operation of Controller -----	3
2.2. Setup Procedure -----	3
2.3. Parameter Setting Method -----	3
2.4. Parameter Setting List -----	4
2.5. Calibration -----	5
2.6. Maintenance -----	6
3. Main Operation -----	7
3.1. Power On -----	7
3.2. One Touch Tare -----	7
3.3. 20 Second Auto Tare -----	7
3.4. Weight Measuring -----	8
3.5. Hold Function -----	8
3.6. Weight Accumulation -----	8
3.7. Accumulated Weight Check -----	9
3.8. Accumulated Data Clear -----	9
3.9. Battery Voltage Check -----	9
4. Display Message & Trouble Shooting -----	10
4.1. Display Message -----	10
4.2. Trouble Shooting -----	10

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Digi/OCX-XZL Series operation manual.html](https://the-checkout-tech.com/manuals/Digi/OCX-XZL%20Series%20operation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)