



## **SERVICE MANUAL**

### **DIGITAL COMPUTING PRINTING SCALE**

**SM-500MK4**

**Edition 1**

## Table of Content

i)	Notice	1
ii)	Safety Information .....	2
<b>1.</b>	<b>GENERAL .....</b>	<b>3</b>
1.1	Model Specification .....	3
1.2	Operating Specification .....	4
1.3	Type of Interface .....	4
1.4	Main Components .....	4
<b>2.</b>	<b>OVERVIEW .....</b>	<b>5</b>
2.1	Dimension .....	5
2.1.1	Pole .....	5
2.1.2	Touch Screen Pole .....	5
2.1.3	Bench .....	6
2.2	Key sheet Layout .....	7
2.3	Panel Layout .....	10
<b>3.</b>	<b>SPAN SWITCH .....</b>	<b>11</b>
3.1	Span Switch Jumper Setting Changing Procedure .....	11
3.2	Span Switch located in Main Board .....	11
<b>4.</b>	<b>INITIAL SETUP .....</b>	<b>12</b>
4.1	Scale Assembly .....	12
4.1.1	Display Pole Kit Mounting .....	12
4.1.2	Level Adjustment .....	12
4.2	Software Setting .....	12
4.2.1	Memory Initialization .....	12
4.3	Calibration .....	16
4.4	User Spec Setup Procedure .....	17
4.5	Weigh & Measurement Spec Setup Procedure .....	19
<b>5.</b>	<b>HARDWARE TESTING &amp; MAINTENANCE .....</b>	<b>21</b>
5.1	Hardware Testing .....	21
5.1.1	RAM Read and Write Test .....	21
5.1.2	SIO Loop Back Test .....	22
5.1.3	RS485 Loop Back Test .....	22
5.1.4	Ethernet Loop Back Test .....	22
5.1.5	ROM Checksum Test .....	23
5.1.6	PLU Generator Test .....	23
5.1.7	Internal Count .....	24
5.1.8	Span Switch Status .....	25
5.2	Adjustment .....	25

5.2.1	Location of Gap Sensor And Peel Sensor .....	25
5.2.2	Label Gap Sensor .....	25
5.2.3	Peel Sensor.....	26
5.2.4	Printing Position .....	27
5.3	Maintenance.....	28
5.3.1	Thermal Head Cleaning .....	28
5.3.2	Basic Maintenance .....	29
5.3.3	Thermal Head cleaning and replacement .....	30
5.4	Method of Assembly Sealing Screw & Sticker .....	31
<b>6.</b>	<b>DISASSEMBLY.....</b>	<b>33</b>
6.1	Pole Type Disassembly.....	33
6.2	AD Board Disassembly .....	36
6.3	Loadcell Disassembly .....	37
6.4	Extra Bracket Disassembly for 30Kg.....	38
<b>7.</b>	<b>FIRMWARE UPGRADE .....</b>	<b>39</b>
7.1	Boot loader Downloading .....	39
7.2	Firmware Downloading .....	42
<b>8.</b>	<b>HARDWARE SETTING.....</b>	<b>46</b>
8.1	Main Board Jumper Setting .....	46
<b>9.</b>	<b>MISCELLANEOUS .....</b>	<b>46</b>
9.1	Error Messages .....	46
9.2	Corresponding Key of IBM Keyboard.....	48
9.3	ASCII Characters.....	48
9.4	TERAOKA Code .....	49
9.5	Wire And Connector .....	49
9.5.1	Straight & Crossover Ethernet Cable .....	49
9.5.2	Cash Drawer Option (RJ11).....	50
9.5.3	PS2 Keyboard Option .....	51
9.5.4	RS232C and Multi-Drop (4 Line, RS485) Wire .....	51
<b>10.</b>	<b>APPENDIX .....</b>	<b>55</b>
10.1	Block Diagram.....	55
10.1.1	Bench Type .....	55
10.1.2	Touch Screen Pole Type .....	56
10.1.3	Elevated Type .....	57
10.2	Specification List.....	58
10.2.1	User Specification [REZERO] + [1][4][1] .....	58
10.2.2	Weigh & Measure Specification [REZERO] + [1][4][2] .....	83
10.2.3	Weigh & Measure Specification [REZERO] + [1][4][1] (For SM90TS, SM500TS and SM500MK4TS).....	91
<b>11.</b>	<b>REVISION RECORDS .....</b>	<b>92</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Digi/SM-500 MK4 service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)