



SERVICE MANUAL

DIGITAL COMPUTING PRINTING SCALE

SM-500MK4

Edition 1

Table of Content

i)	Notice	1
ii)	Safety Information	2
1.	GENERAL	3
1.1	Model Specification	3
1.2	Operating Specification	4
1.3	Type of Interface	4
1.4	Main Components	4
2.	OVERVIEW	5
2.1	Dimension	5
2.1.1	Pole	5
2.1.2	Touch Screen Pole	5
2.1.3	Bench	6
2.2	Key sheet Layout	7
2.3	Panel Layout	10
3.	SPAN SWITCH	11
3.1	Span Switch Jumper Setting Changing Procedure	11
3.2	Span Switch located in Main Board	11
4.	INITIAL SETUP	12
4.1	Scale Assembly	12
4.1.1	Display Pole Kit Mounting	12
4.1.2	Level Adjustment	12
4.2	Software Setting	12
4.2.1	Memory Initialization	12
4.3	Calibration	16
4.4	User Spec Setup Procedure	17
4.5	Weigh & Measurement Spec Setup Procedure	19
5.	HARDWARE TESTING & MAINTENANCE	21
5.1	Hardware Testing	21
5.1.1	RAM Read and Write Test	21
5.1.2	SIO Loop Back Test	22
5.1.3	RS485 Loop Back Test	22
5.1.4	Ethernet Loop Back Test	22
5.1.5	ROM Checksum Test	23
5.1.6	PLU Generator Test	23
5.1.7	Internal Count	24
5.1.8	Span Switch Status	25
5.2	Adjustment	25

5.2.1	Location of Gap Sensor And Peel Sensor	25
5.2.2	Label Gap Sensor	25
5.2.3	Peel Sensor.....	26
5.2.4	Printing Position	27
5.3	Maintenance.....	28
5.3.1	Thermal Head Cleaning	28
5.3.2	Basic Maintenance	29
5.3.3	Thermal Head cleaning and replacement	30
5.4	Method of Assembly Sealing Screw & Sticker	31
6.	DISASSEMBLY.....	33
6.1	Pole Type Disassembly.....	33
6.2	AD Board Disassembly	36
6.3	Loadcell Disassembly	37
6.4	Extra Bracket Disassembly for 30Kg.....	38
7.	FIRMWARE UPGRADE	39
7.1	Boot loader Downloading	39
7.2	Firmware Downloading	42
8.	HARDWARE SETTING.....	46
8.1	Main Board Jumper Setting	46
9.	MISCELLANEOUS	46
9.1	Error Messages	46
9.2	Corresponding Key of IBM Keyboard.....	48
9.3	ASCII Characters.....	48
9.4	TERAOKA Code.....	49
9.5	Wire And Connector	49
9.5.1	Straight & Crossover Ethernet Cable	49
9.5.2	Cash Drawer Option (RJ11).....	50
9.5.3	PS2 Keyboard Option	51
9.5.4	RS232C and Multi-Drop (4 Line, RS485) Wire	51
10.	APPENDIX	55
10.1	Block Diagram.....	55
10.1.1	Bench Type	55
10.1.2	Touch Screen Pole Type	56
10.1.3	Elevated Type	57
10.2	Specification List.....	58
10.2.1	User Specification [REZERO] + [1][4][1]	58
10.2.2	Weigh & Measure Specification [REZERO] + [1][4][2].....	83
10.2.3	Weigh & Measure Specification [REZERO] + [1][4][1] (For SM90TS, SM500TS and SM500MK4TS).....	91
11.	REVISION RECORDS	92

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*