

DORAN

Model 7000

Model 7000XL

Model 8000XL

**Digital Scale
INSTRUCTION MANUAL**

DORAN SCALES, INC.
1315 PARAMOUNT PKWY.
Batavia, IL 60510
1-800-262-6844
FAX: (630) 879-0073
<http://www.doranscales.com>
MANUAL REVISION: 3.1
MAN0190 7/07/2003

Made in USA

Table of Contents

Table of Contents.....	1
Introduction	4
Quick Start User's Guide	5
Fig. 1: Model 7000 Front Panel Layout	5
Model 7000:	5
Fig. 2: Model 7000XL Front Panel Layout	5
Model 7000XL:	6
Fig. 3: Model 8000XL Front Panel Layout	6
Model 8000XL:	6
Power Up:	6
Basic Weighing Operation:.....	7
Turn Off: (8000XL)	7
Low Battery Indication: (8000XL)	7
Electrical Connections:.....	7
Zero:.....	7
Units:	8
Print:	8
Battery Operation: (8000XL)	8
Quick Setup Guide	9
Fig. 4: Load Cell connections	9
Load Cell and Power Connections:	9
Option Connections:.....	9
Fig. 5: Serial Communications and Remote Push Button Connections.....	10
Re-assembling Rear Cover:	10
Entering Calibrations and Parameter setup Mode:.....	10
Capacity:	11
Calibration:	11
A/D Ranging:.....	12
Table 1: Calibration requirements in raw counts	12
Parameter Setup.....	13
Entering and Exiting the Calibration and Parameter Setup Mode:	13
Stepping through the menu parameters:	14
Changing a Parameter:	14
Quick Review of Setup Parameters:.....	14
Legal for Trade Restrictions:	14
Audit Counters:	14
Setup Menus Explained.....	15
Capacity Setup Menu	16
Calibration Menu	17
Digital Filter Setup Menu	18
Automatic Zero Tracking Setup Menu	18
Motion Aperture Setup Menu	19
Start Up Zero Setup Menu	19
Latching Zero Request Setup Menu.....	19

Latching Print Request Setup Menu	19
Printer Data Output Setup Menu	20
Output Formats	20
Baud Rate Setup Menu	20
Serial Data Handshaking Setup Menu	21
Units Conversion Setup Menu	21
Start Up Units Selection Menu	21
Push-button Function Setup Menu	22
Remote Push-button Configuration Menu	22
Legal For Trade Setup Menu	22
Scale Resolution Setup Menu	22
Unit On Timer (8000XL only).....	23
Default all Scale Parameter settings	23
Raw Counts Display Mode	23
Calibration and Parameter Menu Exit.....	23
Data Communications	24
Introduction to data communications:.....	24
Printer Modes:	25
Transmit on demand (t_{od}):	25
Continuous print (c_P):	25
Auto Print 1 (a_P):	25
Auto Print 2 (a_{P2}):	25
Data output format:.....	26
" F_0 " Format:	26
" z_d " Format:	26
" SSP " format:	26
" F_g " Format:.....	26
Table 2: Doran serial protocol	27
Specifications and Interconnect Data	28
Specifications:	28
Table 3: Scale Specifications	28
Interconnect Data:	28
Table 4: TB1 Load Cell Connections	28
Table 5: P2 Options Connections	29
Table 6: J1 Power Connections.....	29
P3 Keyboard Connections.....	29
Table 7: P3 Keyboard Connections	29
Fig. 6: Connector J2, Remote switch cable assembly	29
Fig. 7: Connector J2, Serial cable assembly	30
Table 8: Serial Output pin description	30
Fig. 8: RS232 Output DB9 Connector (optional)	30
Fig. 9: Installation of EMI / RFI / ESD protection devices	31
Fig. 10: Jumpers and Connector Locations	32
Table 9: Board Jumper settings.....	32
4-20mA Analog Output (optional).....	33
Introduction	33
Setup.....	33
Operation	33
Fig. 11: 4-20mA analog option board	33

Troubleshooting	34
General problem resolution:	34
Resetting the scale parameters:	35
Resetting the scale:	35
Scale Messages:	36
Error messages:	36
Replacement Part List	37
Warranty Statement	41

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Doran/7000%207000XL%208000XL%20instruction%20manual.pdf>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)