

INSTALLATION INSTRUCTIONS FOR FACTORY MUTUAL APPROVED INSTRUMENTS

PLEASE NOTE

Installation instructions must be strictly followed in compliance with Intrinsic Safety National Standard NEC 504 or ANSI/ISA RP 12.6 and the National Electrical Code.

DORAN SCALES, INC.

1315 PARAMOUNT PKWY. • BATAVIA, IL 60510
(800)262-6844 • FAX (630)879-0073

MAN0019 REV. 1.4
10/99

TABLE OF CONTENTS

1. Introduction To Intrinsic Safety.....	Page 2
1.0 Introduction.....	Page 2
1.1 What is Factory Mutual Approval?.....	Page 2
1.2 Factory Mutual Adherence Requirements.....	Page 3
1.3 Intrinsic Barriers for options	Page 3
2. Unpacking and Installation.....	Page 4
2.1 Overview.....	Page 4
2.2 Scale Installation.....	Page 4
2.2.1 Scale Utilizing the Model 8000BIS/8000CIS.....	Page 5
2.2.2 Scale Utilizing the Model 8000AIS	Page 6
2.2.3 Model 8000AIS - Type A Installation	Page 6
2.2.4 Model 8000AIS - Type B Installation	Page 7
2.2.5 Interconnect Cable	Page 7
3. Battery Life Considerations	Page 8
3. Troubleshooting and System Overview	Page 9
4. Control Drawing, 02-88060	Page 10

SPECIAL NOTE

Doran Scales, Batavia, IL. is not responsible for the installation, use, or damages as a result of the installation or operation of the Model 8000MIS or the associated equipment used with it.

The Intrinsic Safety of the application is the responsibility of the customer and / or installer.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Doran/8000 installation and service manual.html](https://the-checkout-tech.com/manuals/Doran/8000%20installation%20and%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)