


Model PC-400 Portion Control Scale

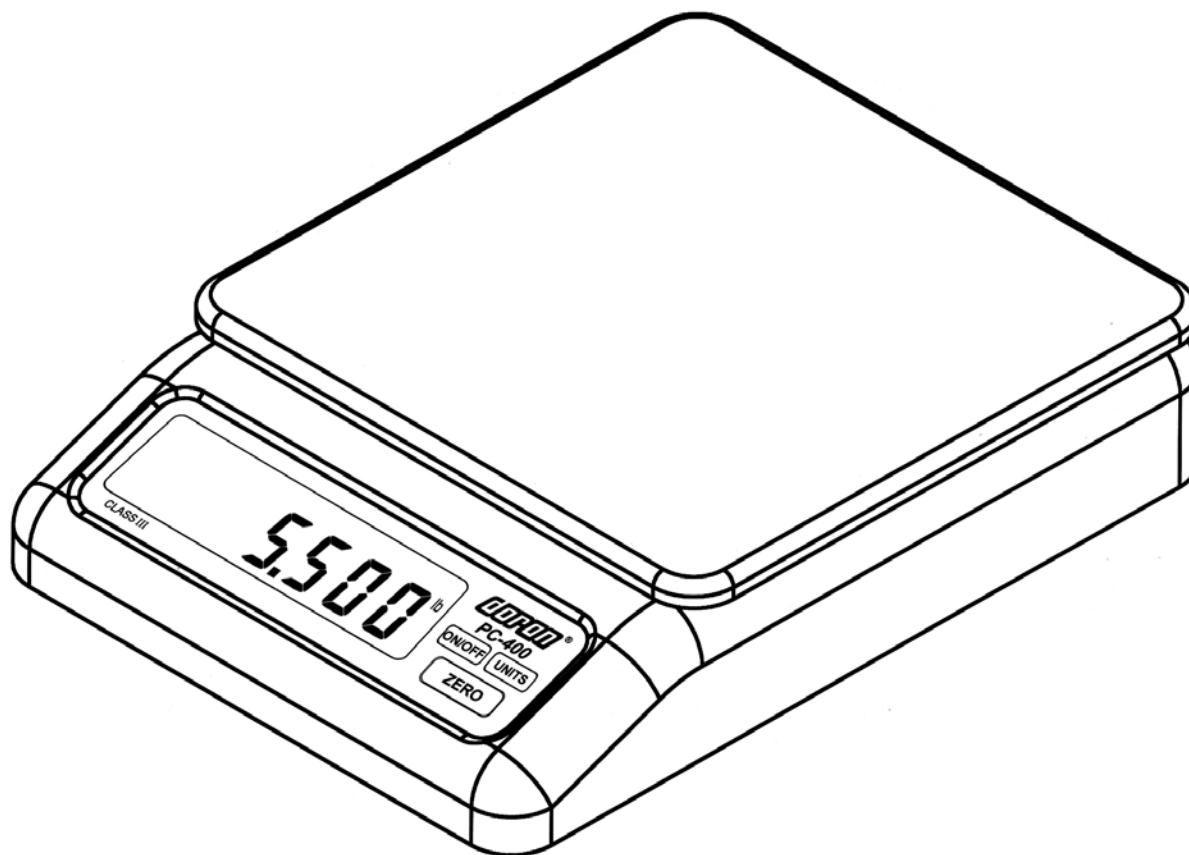

Operator's Manual

Doran Scales, Inc.

1315 Paramount Pkwy

Batavia, IL 60510

1-800-262-6844

www.doranscales.com

Man. #233 Manual Revision 0.1

Table of Contents

Section 1. Unpacking and Installation	1
Unpacking:	1
Installation:	1
Electrical Connections:	1
Care & Cleaning:	1
Section 2. Scale Operations Guide	2
Display Functions:	2
Basic Weighing:	2
Units Select:	2
Battery:	2
Power:	2
Section 3. Setup and Calibration Guide	3
Power connections:	3
RS-232 Connections:	3
Calibration and Parameter Setup:	3
Analog Setup:	4
Section 4. Battery	5
Charging:	5
Replacement:	5
Voltage Levels:	5
Battery Voltages	5
Section 5. Parameter Setup	6
Entering and Exiting Setup Mode:	6
Changing a Parameter:	6
Changing Start up Units:	6
Legal for Trade Restrictions:	6
Section 6. Setup Menus Explained	7
Resoluton (divisions) Setup Menu	7
Capacity Setup Menu	7
Calibration Menu(s)	7
Auto Off Mode	8
Auto Zero Tracking	8
Motion Aperture	8
Start Up Zero	8
Data Output	9
Data Format	9
Baud Rate	9
Convert Select	9
Startup Units	10
Operation Mode	10
Raw Counts	10
Section 7. Data Communications	11
Introduction to data communications:	11
Printer Modes:	12
Data Output Format:	13
Bi-directional Communications:	16
RS232 Pin-outs:	16
Section 8. Specifications	17
Section 9. Troubleshooting	18

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Doran/PC-400 operators manual.html](https://the-checkout-tech.com/manuals/Doran/PC-400_operators_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)