

# Model PC-500 Portion Control Scale



## Technical Manual

**Doran Scales, Inc.**  
1315 Paramount Pkwy  
Batavia, IL 60510  
1-800-262-6844  
[www.doranscales.com](http://www.doranscales.com)  
MAN0266 Revision 0.1

# Table of Contents

|  |           |
|--|-----------|
| <b><u>Section 1. Unpacking and Installation</u></b> .....  | <b>1</b>  |
| Unpacking:.....  | 1         |
| Installation:.....   | 1         |
| Electrical Connections:.....                               | 1         |
| Care & Cleaning:.....                                      | 1         |
| <b><u>Section 2. Scale Operations Guide</u></b> .....      | <b>3</b>  |
| Display Functions:.....                                    | 3         |
| Basic Weighing:.....                                       | 3         |
| Units Select:.....   | 3         |
| Low Battery:.....  | 3         |
| Power:.....  | 3         |
| Automatic Sleep Function:.....                             | 3         |
| <b><u>Section 3. Setup and Calibration Guide</u></b> ..... | <b>4</b>  |
| Optional AC Power Connection:.....                         | 4         |
| Optional RS-232 Connection:.....                           | 4         |
| Optional Remote Zero Switch:.....                          | 5         |
| Calibration and Parameter Setup:.....                      | 6         |
| <b><u>Section 4. Parameter Setup</u></b> .....             | <b>8</b>  |
| Entering and Exiting Setup Mode:.....                      | 8         |
| Changing Start up Units:.....                              | 8         |
| Legal for Trade Restrictions:.....                         | 8         |
| <b><u>Section 5. Setup Menus Explained</u></b> .....       | <b>9</b>  |
| Resolution Setup Menu.....                                 | 9         |
| Capacity Setup Menu.....                                   | 9         |
| Calibration Menu(s).....                                   | 9         |
| Reset All Parameters to Default Settings?.....             | 9         |
| Auto Off Mode.....   | 10        |
| Operation Mode.....  | 10        |
| Auto Zero Tracking.....                                    | 10        |
| Motion Aperture.....                                       | 10        |
| Start Up Zero.....   | 11        |
| Data Output.....   | 11        |
| Data Format.....   | 12        |
| Baud Rate.....   | 12        |
| Units Enabled.....   | 12        |
| Startup Units.....   | 13        |
| Raw Counts.....  | 13        |
| <b><u>Section 6. Data Communications</u></b> .....         | <b>14</b> |
| Remote Scale Commands:.....                                | 17        |
| <b><u>Section 7. Specifications</u></b> .....              | <b>18</b> |
| <b><u>Section 8. Troubleshooting</u></b> .....             | <b>19</b> |
| General problem resolution:.....                           | 19        |
| Error Messages:.....                                       | 20        |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Doran/PC-500 technical manual.html](https://the-checkout-tech.com/manuals/Doran/PC-500%20technical%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)