

## COMPLETE MANUAL WEIGHING INSTRUMENT LCA-D



## CONTENTS

<b>1</b>	<b>OVERVIEW .....</b>	<b>4</b>
<b>2</b>	<b>SPECIFICATIONS .....</b>	<b>5</b>
2.1	TECHNICAL SPECIFICATIONS .....	5
2.2	SYSTEM REQUIREMENTS .....	5
2.3	ELECTRONICAL STRUCTURE .....	6
2.4	OPERATING SPECIFICATIONS .....	7
2.5	DISPLAY SPECIFICATIONS .....	7
2.6	CONTROL SPECIFICATIONS (OPTION) .....	8
2.7	CERTIFICATES.....	8
2.8	PHYSICAL DIMENSIONS.....	9
<b>3</b>	<b>SCREEN APPEARANCE .....</b>	<b>10</b>
3.1	DISPLAY SYMBOLS .....	10
3.2	KEYS.....	10
<b>4</b>	<b>ASSEMBLING AND POWER-UP.....</b>	<b>12</b>
4.1	START UP .....	13
4.2	INDICATOR VALUE RANGE .....	13
4.3	ZERO PROCESS .....	13
4.4	AUTOMATIC ZERO .....	13
4.5	UNITS .....	13
4.6	TARE (SEMI-AUTOMATIC TARE) .....	14
4.7	NUMERICAL TARE .....	14
4.8	DATE AND TIME .....	14
4.9	PROGRAM VERSION .....	14
<b>5</b>	<b>SAFETY PRECAUTIONS .....</b>	<b>15</b>
<b>6</b>	<b>LCA INDICATOR WORKING DIAGRAM.....</b>	<b>16</b>
6.1	PARAMETERS AND THEIR MEANINGS .....	17
6.1.1	#IDENTITY:.....	17
6.1.2	#DISPLAY SETUP:.....	18
6.1.3	#CALIBRATION: .....	21
6.1.4	#INPUT SETUP:.....	22
6.1.5	#OUTPUT SETUP:.....	26
6.1.6	#COMM SETUP:.....	28

6.2	WEIGHT CALIBRATION.....	33
6.2.1	PRE-ADJUSTMENTS & GAIN SETUP .....	33
6.2.2	ZERO CALIBRATION .....	34
6.2.3	LOAD CALIBRATION.....	35
<b>7</b>	<b>NORMAL WEIGHING.....</b>	<b>36</b>
7.1	RESETTING SCREEN VALUE TO ZERO .....	36
7.2	ACTIVATING TARE .....	36
7.3	DISABLING TARE VALUE.....	36
<b>8</b>	<b>ERROR MESSAGES.....</b>	<b>37</b>
<b>9</b>	<b>PROBLEMS AND SOLUTIONS.....</b>	<b>38</b>
<b>10</b>	<b>POWER SUPPLY SPECIFICATIONS.....</b>	<b>39</b>
<b>11</b>	<b>OPERATING TEMPERATURE.....</b>	<b>39</b>
<b>12</b>	<b>LOADCELL CONNECTION .....</b>	<b>40</b>
<b>13</b>	<b>COMMUNICATION CONNECTIONS.....</b>	<b>41</b>
<b>14</b>	<b>OPTION .....</b>	<b>42</b>
14.1	ANALOG OUTPUT OPTION.....	42
14.2	RELAY OPTION.....	43
<b>15</b>	<b>PC SOFTWARES.....</b>	<b>45</b>
<b>16</b>	<b>DIGITAL LINEARIZATION .....</b>	<b>47</b>
<b>17</b>	<b>TEMPERATURE COMPENSATION .....</b>	<b>48</b>
<b>18</b>	<b>COMMUNICATION STRUCTURE.....</b>	<b>49</b>
18.1	PHYSICAL STRUCTURE.....	49
18.2	LCA INDICATOR RS485 SPECIFICATIONS.....	49
18.2.1	DATA STRUCTURE .....	50
18.2.2	APPLICATION LAYER .....	50
<b>19</b>	<b>TERMS.....</b>	<b>52</b>
<b>20</b>	<b>DRAWINGS.....</b>	<b>53</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net