

GSE Model 350/355 IS

INTRINSICALLY SAFE INDICATOR



Technical Reference Manual

Version 1.0

Table of Contents

CHAPTER 1:INTRODUCTION	1
HAZARDOUS AREA GUIDELINES	1
<i>Hazard Grouping</i>	<i>1</i>
<i>Duration of Hazard</i>	<i>2</i>
<i>Temperature Codes</i>	<i>2</i>
<i>Definitions</i>	<i>4</i>
<i>Entity Evaluation Concept.....</i>	<i>4</i>
<i>Entity Rating Definitions</i>	<i>5</i>
<i>Entity Ratings</i>	<i>5</i>
APPROVALS	6
STANDARD FUNCTIONS.....	7
STANDARD FEATURES.....	7
SPECIFICATIONS	7
DISPLAY	8
<i>LED Display</i>	<i>8</i>
<i>LCD Display.....</i>	<i>9</i>
<i>Annunciators</i>	<i>9</i>
350 IS KEYPAD	9
<i>Secondary Functions</i>	<i>10</i>
355 KEYPAD	11
WEIGH MODE FUNCTIONS	12
CHAPTER 2: INSTALLATION	13
SYSTEM DIAGRAMS	13
OUTLINE DRAWINGS	13
LOAD CELL CONNECTIONS	14
COMMUNICATION PORT CONNECTIONS	15
REMOTE KEY CONNECTIONS	15
HAZARDOUS AREA OPTIONS.....	16
<i>Battery Power Supply (External).....</i>	<i>16</i>
<i>AC to DC Power Supply (External).....</i>	<i>16</i>
<i>5 Volt and 8 Volt Excitation</i>	<i>17</i>
CHAPTER 3: CONFIGURATION	18
ENTERING THE SETUP MODE (MODEL 350 IS).....	18
ENTERING THE SETUP MODE (MODEL 355 IS).....	19
SELECTING A PARAMETER	19
CHANGING A PARAMETER VALUE	21
<i>Selection Parameters</i>	<i>21</i>
KEY-IN PARAMETERS	21
SAVING PARAMETERS.....	22
FACTORY DEFAULT.....	24
LIST OF PARAMETERS	25
<i>Parameter Map Details</i>	<i>27</i>
PRESET TRANSMIT SELECTIONS	32
CUSTOM TRANSMIT	34
<i>Elements of a Custom Transmit.....</i>	<i>34</i>
<i>Writing a custom transmit ASCII text file.....</i>	<i>34</i>
<i>Accessing Setup and Clearing Existing Custom Transmit.....</i>	<i>34</i>
<i>Entering ASCII Text</i>	<i>35</i>
<i>Entering ASCII Control Codes.....</i>	<i>35</i>
<i>Parameter Selection Numbers</i>	<i>37</i>

<i>Exiting Setup Mode and Saving Changes</i>	38
PARTS COUNTING	38
SETPOINT SETUP	40
<i>Activation Methods (General)</i>	40
<i>Pre-acts (General)</i>	41
<i>Learn Feature (General)</i>	41
<i>Pause Feature (General)</i>	41
<i>Changing Targets from the Weigh Mode (General)</i>	42
<i>Change Target Weight Example (General)</i>	43
<i>Bargraph (General)</i>	43
PERCENTAGE CHECK-WEIGHING	46
<i>Setpoint Activation (Percentage Check-Weighing)</i>	46
<i>Changing Targets from the Weigh Mode (Percentage Check-Weighing)</i>	46
<i>Example (Percentage Check-Weighing)</i>	47
FILL	48
<i>Activation Method (Fill)</i>	48
<i>Pre-acts (Fill)</i>	48
<i>Learn Feature (Fill)</i>	49
<i>Pause Feature (Fill)</i>	49
<i>Changing Targets from the Weigh Mode (Fill)</i>	49
<i>Example (Fill)</i>	49
BATCH	49
<i>Activation Method (Batch)</i>	50
<i>Pre-acts (Batch)</i>	50
<i>Learn Feature (Batch)</i>	50
<i>Pause Feature (Batch)</i>	50
<i>Changing Targets from the Weigh Mode (Batch)</i>	50
<i>Example (Batch)</i>	51
DISCHARGE	51
<i>Activation Method (Discharge)</i>	52
<i>Pre-acts (Discharge)</i>	52
<i>Learn Feature (Discharge)</i>	52
<i>Pause Feature (Discharge)</i>	53
<i>Target Changes from the Weigh Mode (Discharge)</i>	53
<i>Example (Discharge)</i>	53
BOTH	53
<i>Activation Method (Both)</i>	54
<i>Pre-acts (Both)</i>	54
<i>Learn Feature (Both)</i>	54
<i>Pause Feature (Both)</i>	55
<i>Target Changes from the Weigh Mode (Both)</i>	55
<i>Example (Both)</i>	55
ABSOLUTE CHECK-WEIGHING	55
<i>Setpoint Activation (Absolute Check-Weighing)</i>	56
<i>Changing Targets from the Weigh Mode (Absolute Check-Weighing)</i>	56
<i>Example (Absolute Check-Weighing)</i>	57
INDEPENDENT SETPOINT OPERATION	57
<i>Setpoint Activation (Independent)</i>	58
<i>Changing Targets from the Weigh Mode (Independent)</i>	58
<i>Example (Independent)</i>	59
TARGET DEVIATION CHECK-WEIGHING	59
<i>Setpoint Activation (Target Deviation Check-Weighing)</i>	60
<i>Changing Targets from the Weigh Mode (Target Deviation Check-Weighing)</i>	60
<i>Example (Target Deviation Check-Weighing)</i>	61
BARGRAPH SETUP (LCD)	61
TIME AND DATE SETUP (MODEL 350 IS)	63

TIME AND DATE SETUP (MODEL 355 IS)	65
REMOTE KEY OPERATION	66
REMOTE SERIAL OPERATION	66
<i>Display Capture Utility</i>	67
UPGRADE INDICATOR FIRMWARE	67
<i>Prepare for upgrade</i>	68
<i>Load Flash File</i>	68
CHAPTER 4: CALIBRATION	69
SETUP MODE CALIBRATION	69
FAST CALIBRATION	69
PERFORMING CALIBRATION	69
ESTABLISHING ZERO	70
<i>First Zero</i>	70
<i>Last Zero</i>	72
<i>False Zero</i>	74
<i>Only Zero</i>	76
<i>Reset Calibration</i>	77
ESTABLISHING A SPAN	79
EXITING CALIBRATION	80
CHAPTER 5: LEGAL FOR TRADE.....	82
NTEP REQUIREMENTS	82
OMIL REQUIREMENTS	82
OTHER REQUIREMENTS	83
SEALING AND AUDIT TRAILS	83
<i>Physical Seal</i>	84
<i>Audit Trails</i>	84
CHAPTER 7: TROUBLESHOOTING.....	86
ERROR MESSAGES	86
<i>Operational Errors</i>	86
<i>Setup Mode Errors</i>	87
<i>Hardware Errors</i>	87
<i>Calibration Errors</i>	88
<i>Communication Errors</i>	88
<i>Miscellaneous Errors</i>	88
VIEWING SETUP	89
INFORMATION MODE PARAMETERS	89
A/D CALIBRATION PROCEDURE	91

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*