

# *GSE Model 350/355*

## DIGITAL WEIGH INDICATOR



## Technical Reference Manual

Version 2.0

# Table of Contents

- CHAPTER 1:INTRODUCTION..... 1**
- STANDARD FEATURES..... 1
- SPECIFICATIONS..... 1
- DISPLAY..... 3
  - LED Display*..... 3
  - LCD Display*..... 3
  - Annunciators*..... 4
- 350 KEYPAD..... 4
  - Secondary Functions*..... 4
- 355 KEYPAD..... 5
- STANDARD FUNCTIONS..... 6
- WEIGH MODE FUNCTIONS..... 6
- CHAPTER 2: INDICATOR INSTALLATION..... 8**
- MOUNTING..... 8
  - Desktop Mounting*..... 8
  - Panel Mounting*..... 8
  - Permanent Mounting*..... 9
  - Outline Drawings*..... 9
- WIRING..... 11
  - Load Cell Connections*..... 11
  - Serial Port Connections*..... 11
  - Remote Key Connection*..... 12
  - Power Connection*..... 13
- CHAPTER 3: OPTION INSTALLATION ..... 15**
- MODEL 350/355 PERIPHERAL OPTIONS..... 15
- SWIVEL BRACKET..... 16
- PANEL MOUNT KIT..... 16
- ANALOG CARD CONNECTIONS..... 18
  - Analog Board Diagnostic and Test Procedures*..... 20
- ANALOG OUTPUT SETUP..... 23
- ANALOG OUTPUT CALIBRATION..... 24
  - Entering Analog Calibration Values*..... 24
  - Analog Output Example*..... 25
- SETPOINT CARD CONNECTIONS..... 26
  - Setpoint Board Diagnostic and Test Procedures*..... 29
- RS-485 NETWORKING..... 30
  - Network Connections*..... 31
- 20 MA CURRENT LOOP OPTION..... 33
  - Installation:*..... 33
    - Bi-directional*..... 33
    - Baud*..... 33
    - Active/Passive*..... 33

<i>Isolation</i> .....	33
<i>Max Voltage</i> .....	34
<i>Connections</i> .....	34
<i>Cable</i> .....	34
<i>Connected Devices</i> .....	34
BATTERY POWER SUPPLY .....	35
<i>Mounting</i> .....	35
<i>Pin Designations</i> .....	36
<i>ON/OFF Switch</i> .....	37
<i>Battery Charging</i> .....	37
<i>Temperature Sensing</i> .....	38
<i>Low Battery Indication</i> .....	38
<i>Dead Battery Shutdown</i> .....	38
<i>Automatic Shutdown</i> .....	38
SPLASH GUARD PROTECTION .....	39
INTERNATIONAL TRANSFORMER - IEC .....	39
<i>Specifications</i> .....	39
<i>Transformers Available</i> .....	39
<i>IEC line cords Available</i> .....	39
<b>CHAPTER 4: CONFIGURATION</b> .....	<b>40</b>
ENTERING THE SETUP MODE (MODEL 350) .....	40
ENTERING THE SETUP MODE (MODEL 355) .....	41
SELECTING A PARAMETER .....	41
CHANGING A PARAMETER VALUE .....	43
<i>Selection Parameters</i> .....	43
KEY-IN PARAMETERS .....	43
SAVING PARAMETERS .....	44
FACTORY DEFAULT .....	46
LIST OF PARAMETERS .....	47
<i>Parameter Map Details</i> .....	48
PRESET TRANSMIT SELECTIONS .....	53
CUSTOM TRANSMIT .....	55
<i>Elements of a Custom Transmit</i> .....	55
<i>Writing a custom transmit ASCII text file</i> .....	55
<i>Accessing Setup and Clearing Existing Custom Transmit</i> .....	55
<i>Entering ASCII Text</i> .....	56
<i>Entering ASCII Control Codes</i> .....	56
<i>Parameter Selection Numbers</i> .....	58
<i>Exiting Setup Mode and Saving Changes</i> .....	59
PARTS COUNTING .....	59
ANALOG OUTPUT SETUP .....	60
ANALOG OUTPUT CALIBRATION .....	61
<i>Entering Analog Calibration Values</i> .....	61
<i>Analog Output Example</i> .....	62
SETPOINT SETUP .....	63
<i>Activation Methods (General)</i> .....	63

<i>Pre-acts (General)</i> .....	64
<i>Learn Feature (General)</i> .....	64
<i>Pause Feature (General)</i> .....	64
<i>Changing Targets from the Weigh Mode (General)</i> .....	65
<i>Example (General)</i> .....	65
<i>Bargraph (General)</i> .....	66
FILL .....	68
<i>Activation Method (Fill)</i> .....	68
<i>Pre-acts (Fill)</i> .....	68
<i>Learn Feature (Fill)</i> .....	69
<i>Pause Feature (Fill)</i> .....	69
<i>Changing Targets from the Weigh Mode (Fill)</i> .....	69
<i>Example (Fill)</i> .....	69
BATCH .....	69
<i>Activation Method (Batch)</i> .....	70
<i>Pre-acts (Batch)</i> .....	70
<i>Learn Feature (Batch)</i> .....	70
<i>Pause Feature (Batch)</i> .....	70
<i>Changing Targets from the Weigh Mode (Batch)</i> .....	70
<i>Example (Batch)</i> .....	71
DISCHARGE.....	71
<i>Activation Method (Discharge)</i> .....	72
<i>Pre-acts (Discharge)</i> .....	72
<i>Learn Feature (Discharge)</i> .....	72
<i>Pause Feature (Discharge)</i> .....	72
<i>Target Changes from the Weigh Mode (Discharge)</i> .....	73
<i>Example (Discharge)</i> .....	73
BOTH .....	73
<i>Activation Method (Both)</i> .....	74
<i>Pre-acts (Both)</i> .....	74
<i>Learn Feature (Both)</i> .....	74
<i>Pause Feature (Both)</i> .....	74
<i>Target Changes from the Weigh Mode (Both)</i> .....	74
<i>Example (Both)</i> .....	75
INDEPENDENT SETPOINT OPERATION.....	75
<i>Setpoint Activation (Independent)</i> .....	76
<i>Changing Targets from the Weigh Mode (Independent)</i> .....	76
<i>Example (Independent)</i> .....	77
BARGRAPH SETUP (LCD) .....	77
PERCENTAGE CHECK-WEIGHING .....	79
<i>Setpoint Activation (Percentage Check-Weighing)</i> .....	80
<i>Changing Targets from the Weigh Mode (Percentage Check-Weighing)</i> .....	80
<i>Example (Percentage Check-Weighing)</i> .....	81
ABSOLUTE CHECK-WEIGHING .....	81
<i>Setpoint Activation (Absolute Check-Weighing)</i> .....	82
<i>Changing Targets from the Weigh Mode (Absolute Check-Weighing)</i> .....	82

<i>Example (Absolute Check-Weighing)</i> .....	83
REMOTE KEY OPERATION .....	83
REMOTE SERIAL OPERATION .....	83
<i>Display Capture Utility</i> .....	84
TIME AND DATE SETUP (MODEL 350).....	84
TIME AND DATE SETUP (MODEL 355).....	86
RS-485 MULTI-DROP NETWORK SETUP AND OPERATION .....	86
<i>Setup</i> .....	87
<i>Operation</i> .....	87
<i>Network Protocol</i> .....	87
<b>CHAPTER 5: CALIBRATION .....</b>	<b>88</b>
SETUP MODE CALIBRATION .....	88
FAST CALIBRATION.....	88
PERFORMING CALIBRATION .....	88
ESTABLISHING ZERO .....	89
<i>First Zero</i> .....	89
<i>Last Zero</i> .....	91
<i>False Zero</i> .....	93
<i>Only Zero</i> .....	95
<i>Reset Calibration</i> .....	96
ESTABLISHING A SPAN .....	98
EXITING CALIBRATION .....	99
<b>CHAPTER 6: LEGAL FOR TRADE .....</b>	<b>101</b>
NTEP REQUIREMENTS.....	101
NTEP PANEL MOUNT REQUIREMENTS .....	101
OMIL REQUIREMENTS .....	102
OTHER REQUIREMENTS.....	102
SEALING AND AUDIT TRAILS.....	103
<i>Physical Seal</i> .....	103
<i>Audit Trails</i> .....	104
<b>CHAPTER 7: TROUBLESHOOTING .....</b>	<b>106</b>
ERROR MESSAGES .....	106
<i>Operational Errors</i> .....	106
<i>Setup Mode Errors</i> .....	107
<i>Hardware Errors</i> .....	107
<i>Calibration Errors</i> .....	108
<i>Communication Errors</i> .....	108
<i>Miscellaneous Errors</i> .....	108
VIEWING SETUP .....	108
INFORMATION MODE PARAMETERS .....	109
A/D CALIBRATION PROCEDURE.....	111

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/GSE/350> and [355 Technical Reference v2 manu](https://the-checkout-tech.com/manuals/GSE/355)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)