
DIGITAL WEIGHT INDICATOR

GSE 350/355



Reference Manual 1.0



**scale
systems**

CONTENTS

CHAPTER 1: INTRODUCTION.....	1
CONVENTIONS AND SYMBOLS.....	1
DISPLAY.....	2
<i>LED Display</i>	2
<i>LCD Display</i>	2
<i>Annunciators</i>	3
350 KEYPAD.....	3
SECONDARY FUNCTIONS.....	3
355 KEYPAD.....	5
STANDARD FUNCTIONS.....	6
WEIGH MODE FUNCTIONS.....	6
SPECIFICATIONS.....	7
CHAPTER 2: INSTALLATION.....	9
MOUNTING.....	9
<i>Desktop Mounting</i>	9
<i>Panel Mounting</i>	10
<i>Permanent Mounting</i>	10
WIRING.....	12
<i>Load Cell Connections</i>	13
<i>Serial Port Connections</i>	13
<i>Remote Key Connection</i>	15
<i>Power Connection</i>	15
CHAPTER 3: CONFIGURATION.....	19
SETUP MODE ACCESS (350).....	19
SELECTION PARAMETERS.....	22
KEY-IN PARAMETERS.....	23
SETUP MODE ACCESS (355).....	24
PARAMETER MAP.....	26
<i>Parameter Map Details</i>	28
ANALOG OUTPUT SETUP.....	38
ANALOG OUTPUT CALIBRATION.....	39
<i>Entering Analog Calibration Values</i>	40
<i>Analog Output Example</i>	41
CUSTOM TRANSMIT SETUP.....	41
<i>Elements of a Custom Transmit</i>	42
<i>Writing a custom transmit ASCII text file</i>	42
<i>Accessing Setup and Clearing Existing Custom Transmit</i>	42

<i>Entering ASCII Text</i>	43
<i>Entering ASCII Control Codes</i>	43
<i>Parameter Selection Numbers</i>	45
<i>Exiting Setup Mode and Saving Changes</i>	47
TIME/DATE OPERATION	47
REMOTE KEY OPERATION.....	49
REMOTE SERIAL OPERATION	50
<i>Display Capture Utility</i>	50
GENERAL SETPOINT SETUP	52
<i>Activation Methods (General)</i>	53
<i>Pre-acts (General)</i>	53
<i>Learn Feature (General)</i>	54
<i>Pause Feature (General)</i>	54
<i>Changing Targets from the Weigh Mode (General)</i>	55
<i>Example (General)</i>	55
<i>Bargraph (General)</i>	56
PERCENTAGE CHECK-WEIGHING.....	59
<i>Setpoint Activation (Percentage Check -Weighing)</i>	59
<i>Changing Targets from the Weigh Mode (Percentage Check -Weighing)</i>	60
<i>Example (Percentage Check -Weighing)</i>	60
FILL.....	60
<i>Activation Method (Fill)</i>	61
<i>Pre-acts (Fill)</i>	61
<i>Learn Feature (Fill)</i>	62
<i>Pause Feature (Fill)</i>	62
<i>Changing Targets from the Weigh Mode (Fill)</i>	62
<i>Example (Fill)</i>	62
BATCH.....	62
<i>Activation Method (Batch)</i>	63
<i>Pre-acts (Batch)</i>	64
<i>Learn Feature (Batch)</i>	64
<i>Pause Feature (Batch)</i>	64
<i>Changing Targets from the Weigh Mode (Batch)</i>	64
<i>Example (Batch)</i>	64
DISCHARGE	66
<i>Activation Method (Discharge)</i>	66
<i>Pre-acts (Discharge)</i>	67
<i>Learn Feature (Discharge)</i>	67
<i>Pause Feature (Discharge)</i>	67
<i>Target Changes from the Weigh Mode (Discharge)</i>	67
<i>Example (Discharge)</i>	68
BOTH.....	68
<i>Activation Method (Both)</i>	69

<i>Pre-acts (Both)</i>	69
<i>Learn Feature (Both)</i>	70
<i>Pause Feature (Both)</i>	70
<i>Target Changes from the Weigh Mode (Both)</i>	70
<i>Example (Both)</i>	70
ABSOLUTE CHECK-WEIGHING	71
<i>Setpoint Activation (Absolute Check-Weighing)</i>	71
<i>Changing Targets from the Weigh Mode (Absolute Check-Weighing)</i>	72
<i>Example (Absolute Check-Weighing)</i>	72
INDEPENDENT SETPOINT OPERATION	72
<i>Setpoint Activation (Independent)</i>	73
<i>Changing Targets from the Weigh Mode (Independent)</i>	74
<i>Example (Independent)</i>	75
RS-485 MULTI-DROP NETWORK SETUP AND OPERATION	76
<i>Setup</i>	76
<i>Operation</i>	76
<i>Network Protocol</i>	77
CHAPTER 4: CALIBRATION MODE	79
SETUP MODE CALIBRATION	79
FAST CALIBRATION	79
PERFORMING CALIBRATION	80
<i>Establishing Zero</i>	80
<i>Establishing Span</i>	91
<i>Exiting Calibration</i>	92
CHAPTER 5: LEGAL-FOR-TRADE	93
NTEP REQUIREMENTS	93
<i>NTEP Panel Mount Requirements</i>	94
OIML REQUIREMENTS	95
OTHER REQUIREMENTS	95
SEALING AND AUDIT TRAILS	95
<i>Physical Seal</i>	96
<i>Audit Trails</i>	97
CHAPTER 6: OPTION KITS	99
MODEL 350/355 PERIPHERAL OPTIONS	99
SWIVEL BRACKET	100
PANEL MOUNT KIT	101
ANALOG CARD CONNECTIONS	102
<i>Analog Board Diagnostic and Test Procedures</i>	107
ANALOG OUTPUT SETUP	110
ANALOG OUTPUT CALIBRATION	111

<i>Entering Analog Calibration Values</i>	111
<i>Analog Output Example</i>	113
CONNECTIONS.....	113
SETPOINT CARD CONNECTIONS.....	114
<i>Setpoint Board Diagnostic and Test Procedures</i>	121
RS-485 NETWORKING.....	122
<i>Network Connections</i>	124
20 MA CURRENT LOOP OPTION.....	128
<i>Installation</i>	128
<i>Bi-directional</i>	128
<i>Baud</i>	128
<i>Active/Passive</i>	129
<i>Isolation</i>	129
<i>Max Voltage</i>	129
<i>Connections</i>	129
<i>Cable</i>	129
<i>Connected Devices</i>	130
BATTERY POWER SUPPLY.....	130
<i>Mounting</i>	131
<i>Pin Designations</i>	134
<i>ON/OFF Switch</i>	134
<i>Battery Charging</i>	135
<i>Temperature Sensing</i>	135
<i>Low Battery Indication</i>	136
<i>Dead Battery Shutdown</i>	136
<i>Automatic Shutdown</i>	136
SPLASH GUARD PROTECTION.....	137
INTERNATIONAL TRANSFORMER - IEC.....	137
<i>Specifications</i>	138
<i>Transformers Available</i>	138
<i>IEC line cords Available</i>	138
CHAPTER 7: TROUBLESHOOTING.....	139
ERROR MESSAGES.....	139
<i>Operational Errors</i>	139
<i>Setup Mode Errors</i>	140
<i>Hardware Errors</i>	141
<i>Calibration Errors</i>	142
<i>Communication Errors</i>	142
<i>Miscellaneous Errors</i>	143
VIEWING SETUP.....	143
INFORMATION MODE PARAMETERS.....	144
A/D CALIBRATION PROCEDURE.....	146

TABLES

Model 350 Keypad Functions.....	4
Serial Port Connections.....	14
Parameter Map.....	26
Analog Output Parameters.....	38
Analog Output Calibration Parameters.....	39
ASCII / HEXADECIMAL CONVERSION CHART.....	44
Custom Transmit Parameter Selection Numbers.....	45
Custom Transmit Format Codes.....	46
Remote Key Operations.....	49
Remote Serial Operation.....	50
Setpoint Operations.....	52
Setpoint Setup (Percentage Check-Weighing).....	59
Setpoint Setup (Fill).....	60
Setpoint Setup (Batch).....	63
Setpoint Setup (Discharge).....	66
Setpoint Setup (Both).....	69
Setpoint Setup (Absolute Check-Weighing).....	71
Setpoint Setup (Independent).....	73
RS-485 Network Parameters.....	76
RS-485 Mode of Operation.....	76
Analog Output Connections.....	105
Analog Output Parameters.....	110
Analog Output Calibration Parameters.....	111
Setpoint Output Specifications (24350B-100C0).....	117
Setpoint Control Connections (24350B-100C0).....	117
Setpoint Output Specifications (24350B-100C1).....	118
Setpoint Control Connections (24350B-100C1).....	118
Setpoint Output Specifications (24350B-100C2).....	119
Setpoint Control Connections (24350B-100C2).....	119
Label Terminology.....	130
Connecting to External Devices.....	130
Information Parameters.....	144

FIGURES

Model 350/355 LED Display.....	2
Model 350/355 LCD Display (with Bargraph).....	2
Model 350 Keypad	3
Model 350 Zinc Die Cast with Optional Mounting Bracket	10
Model 350 Zinc Die Cast Front Dimensions.....	11
Model 350 Zinc Die Cast Enclosure Wiring Label.....	12
Power Supply Models	13
GSE Serial Cable, Part Number 22-30-29752.....	14
Remote Key Connection (Model 350 die cast).....	15
Remote Key Connection (Model 350 stainless and Model 355).....	15
Model 350 Power Connections.....	16
Model 350/355 Internal Power Supply Model AC Connections (J10).....	17
Model 350/355 Internal Power Supply Model DC Connections (J3).....	17
Custom Transmit File.....	43
Example #1 Bargraph Segments (Weighted Value).....	57
Example #2 Bargraph Segments (Weighted Value).....	57
Examples of the Bargraph "Below, Within and Above Tolerance".....	58
Panel Mount Unit - Serial Number Tag (Die Cast Model).....	94
Program Jumper (External and Internal Power Supply Boards).....	96
Physical Seals (Zinc Die-Cast / Stainless Steel).....	97
Swivel Bracket Installation (Die Cast Model)	100
Model 350 Panel Mount Installation (Die Cast Model).....	101
Option Board Installation (Die Cast Model 350)	103
Option Board Installation (Stainless Model 350).....	104
Option Board Installation (Die Cast Model 350)	115
Option Board Installation (Stainless Model 350).....	116
Wire the option connector in accordance with the label (left to right).	120
RS-485 Installation (Die Cast Model).....	122
RS-485 Installation (Stainless Model).....	123
<i>Half Duplex Wiring Schematic</i>	126
<i>Full Duplex Wiring Schematic</i>	127
Battery Option Installation (Stainless Steel Enclosure).....	132
Battery Option Installation (Die Cast Enclosure).....	133
Model 350/355 Main Board Battery Connection.....	134

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/GSE/350 and 355 reference manual.html](https://the-checkout-tech.com/manuals/GSE/350%20and%20355%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)