

# *GSE Model 350/355 IS*

## INTRINSICALLY SAFE INDICATOR



## Technical Reference Manual

Version 1.0

# Table of Contents

<b>CHAPTER 1:INTRODUCTION.....</b>	<b>1</b>
HAZARDOUS AREA GUIDELINES .....	1
<i>Hazard Grouping .....</i>	<i>1</i>
<i>Duration of Hazard .....</i>	<i>2</i>
<i>Temperature Codes .....</i>	<i>2</i>
<i>Definitions .....</i>	<i>4</i>
<i>Entity Evaluation Concept.....</i>	<i>4</i>
<i>Entity Rating Definitions .....</i>	<i>5</i>
<i>Entity Ratings .....</i>	<i>5</i>
APPROVALS .....	6
STANDARD FUNCTIONS.....	7
STANDARD FEATURES.....	7
SPECIFICATIONS .....	7
DISPLAY.....	8
<i>LED Display.....</i>	<i>8</i>
<i>LCD Display.....</i>	<i>9</i>
<i>Annunciators .....</i>	<i>9</i>
350 IS KEYPAD .....	9
<i>Secondary Functions .....</i>	<i>10</i>
355 KEYPAD .....	11
WEIGH MODE FUNCTIONS .....	12
<b>CHAPTER 2: INSTALLATION .....</b>	<b>13</b>
SYSTEM DIAGRAMS .....	13
OUTLINE DRAWINGS.....	13
LOAD CELL CONNECTIONS .....	14
COMMUNICATION PORT CONNECTIONS .....	15
REMOTE KEY CONNECTIONS .....	15
HAZARDOUS AREA OPTIONS.....	16
<i>Battery Power Supply (External).....</i>	<i>16</i>
<i>AC to DC Power Supply (External).....</i>	<i>16</i>
<i>5 Volt and 8 Volt Excitation .....</i>	<i>17</i>
<b>CHAPTER 3: CONFIGURATION .....</b>	<b>18</b>
ENTERING THE SETUP MODE (MODEL 350 IS).....	18
ENTERING THE SETUP MODE (MODEL 355 IS).....	19
SELECTING A PARAMETER .....	19
CHANGING A PARAMETER VALUE .....	21
<i>Selection Parameters.....</i>	<i>21</i>
KEY-IN PARAMETERS .....	21
SAVING PARAMETERS.....	22
FACTORY DEFAULT.....	24
LIST OF PARAMETERS .....	25
<i>Parameter Map Details .....</i>	<i>27</i>
PRESET TRANSMIT SELECTIONS.....	32
CUSTOM TRANSMIT .....	34
<i>Elements of a Custom Transmit.....</i>	<i>34</i>
<i>Writing a custom transmit ASCII text file.....</i>	<i>34</i>
<i>Accessing Setup and Clearing Existing Custom Transmit.....</i>	<i>34</i>
<i>Entering ASCII Text .....</i>	<i>35</i>
<i>Entering ASCII Control Codes .....</i>	<i>35</i>
<i>Parameter Selection Numbers.....</i>	<i>37</i>

<i>Exiting Setup Mode and Saving Changes</i> .....	38
PARTS COUNTING .....	38
SETPOINT SETUP .....	40
<i>Activation Methods (General)</i> .....	40
<i>Pre-acts (General)</i> .....	41
<i>Learn Feature (General)</i> .....	41
<i>Pause Feature (General)</i> .....	41
<i>Changing Targets from the Weigh Mode (General)</i> .....	42
<i>Change Target Weight Example (General)</i> .....	43
<i>Bargraph (General)</i> .....	43
PERCENTAGE CHECK-WEIGHING .....	46
<i>Setpoint Activation (Percentage Check-Weighing)</i> .....	46
<i>Changing Targets from the Weigh Mode (Percentage Check-Weighing)</i> .....	46
<i>Example (Percentage Check-Weighing)</i> .....	47
FILL .....	48
<i>Activation Method (Fill)</i> .....	48
<i>Pre-acts (Fill)</i> .....	48
<i>Learn Feature (Fill)</i> .....	49
<i>Pause Feature (Fill)</i> .....	49
<i>Changing Targets from the Weigh Mode (Fill)</i> .....	49
<i>Example (Fill)</i> .....	49
BATCH .....	49
<i>Activation Method (Batch)</i> .....	50
<i>Pre-acts (Batch)</i> .....	50
<i>Learn Feature (Batch)</i> .....	50
<i>Pause Feature (Batch)</i> .....	50
<i>Changing Targets from the Weigh Mode (Batch)</i> .....	50
<i>Example (Batch)</i> .....	51
DISCHARGE .....	51
<i>Activation Method (Discharge)</i> .....	52
<i>Pre-acts (Discharge)</i> .....	52
<i>Learn Feature (Discharge)</i> .....	52
<i>Pause Feature (Discharge)</i> .....	53
<i>Target Changes from the Weigh Mode (Discharge)</i> .....	53
<i>Example (Discharge)</i> .....	53
BOTH .....	53
<i>Activation Method (Both)</i> .....	54
<i>Pre-acts (Both)</i> .....	54
<i>Learn Feature (Both)</i> .....	54
<i>Pause Feature (Both)</i> .....	55
<i>Target Changes from the Weigh Mode (Both)</i> .....	55
<i>Example (Both)</i> .....	55
ABSOLUTE CHECK-WEIGHING .....	55
<i>Setpoint Activation (Absolute Check-Weighing)</i> .....	56
<i>Changing Targets from the Weigh Mode (Absolute Check-Weighing)</i> .....	56
<i>Example (Absolute Check-Weighing)</i> .....	57
INDEPENDENT SETPOINT OPERATION.....	57
<i>Setpoint Activation (Independent)</i> .....	58
<i>Changing Targets from the Weigh Mode (Independent)</i> .....	58
<i>Example (Independent)</i> .....	59
TARGET DEVIATION CHECK-WEIGHING .....	59
<i>Setpoint Activation (Target Deviation Check-Weighing)</i> .....	60
<i>Changing Targets from the Weigh Mode (Target Deviation Check-Weighing)</i> .....	60
<i>Example (Target Deviation Check-Weighing)</i> .....	61
BARGRAPH SETUP (LCD) .....	61
TIME AND DATE SETUP (MODEL 350 IS) .....	63

TIME AND DATE SETUP (MODEL 355 IS) .....	65
REMOTE KEY OPERATION.....	66
REMOTE SERIAL OPERATION .....	66
<i>Display Capture Utility</i> .....	67
UPGRADE INDICATOR FIRMWARE .....	67
<i>Prepare for upgrade</i> .....	68
<i>Load Flash File</i> .....	68
<b>CHAPTER 4: CALIBRATION .....</b>	<b>69</b>
SETUP MODE CALIBRATION .....	69
FAST CALIBRATION.....	69
PERFORMING CALIBRATION.....	69
ESTABLISHING ZERO.....	70
<i>First Zero</i> .....	70
<i>Last Zero</i> .....	72
<i>False Zero</i> .....	74
<i>Only Zero</i> .....	76
<i>Reset Calibration</i> .....	77
ESTABLISHING A SPAN .....	79
EXITING CALIBRATION .....	80
<b>CHAPTER 5: LEGAL FOR TRADE.....</b>	<b>82</b>
NTEP REQUIREMENTS.....	82
OMIL REQUIREMENTS .....	82
OTHER REQUIREMENTS.....	83
SEALING AND AUDIT TRAILS.....	83
<i>Physical Seal</i> .....	84
<i>Audit Trails</i> .....	84
<b>CHAPTER 7: TROUBLESHOOTING.....</b>	<b>86</b>
ERROR MESSAGES .....	86
<i>Operational Errors</i> .....	86
<i>Setup Mode Errors</i> .....	87
<i>Hardware Errors</i> .....	87
<i>Calibration Errors</i> .....	88
<i>Communication Errors</i> .....	88
<i>Miscellaneous Errors</i> .....	88
VIEWING SETUP .....	89
INFORMATION MODE PARAMETERS .....	89
A/D CALIBRATION PROCEDURE.....	91

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/GSE/350 and 355 IS technical reference manual>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

<HTTPS://THE-CHECKOUT-TECH.COM>