

# *GSE 351*

## Checkweigher



**Technical Reference Manual 1.1**



# Contents

<b>CHAPTER 1: Introduction</b> .....	<b>1</b>
CONVENTIONS AND SYMBOLS .....	1
DISPLAY .....	2
<i>LED Display</i> .....	2
<i>Annunciators</i> .....	2
KEYPAD.....	3
WEIGH MODE FUNCTIONS .....	3
SECONDARY FUNCTIONS .....	4
SPECIFICATIONS.....	5
Performance.....	5
Electrical.....	5
Operation .....	5
Communication.....	5
display.....	5
Enclosure .....	5
Options.....	5
Platform .....	5
<b>CHAPTER 2: Installation</b> .....	<b>7</b>
BENCHTOP MOUNTING .....	7
WIRING.....	9
<i>Power Connection</i> .....	9
<i>DC Power Connection</i> .....	9
<i>Serial Port Connection</i> .....	9
<i>Remote Key Connection</i> .....	11
<i>Load cell connection</i> .....	12
<b>CHAPTER 3: Getting Started</b> .....	<b>13</b>
DEFAULT SETUP .....	13
OPERATION.....	13
<i>Entering a Target Value</i> .....	14
<i>Entering Tolerances</i> .....	17
<i>Status Indication</i> .....	18
<i>Counting</i> .....	18
<i>Printing out a Ticket</i> .....	19
<b>CHAPTER 4: Configuration</b> .....	<b>21</b>
SETUP MODE .....	21
<i>Selection Parameters</i> .....	23
<i>Key-In Parameters</i> .....	24
PARAMETER MAP .....	25
PARAMETER MAP DETAILS.....	27
CUSTOM TRANSMIT SETUP .....	37
<i>Elements Of A Custom Transmit</i> .....	37
Parameters.....	38

ASCII Text.....	38
Control Codes .....	38
<i>Writing A Custom Transmit ASCII Text File.....</i>	38
<i>Accessing Setup and Clearing Existing Custom Transmit .....</i>	39
<i>Entering ASCII Text.....</i>	39
<i>Entering ASCII Control Codes.....</i>	39
<i>Parameter Selection Numbers.....</i>	41
<i>Exiting Setup Mode And Saving Changes .....</i>	43
TIME/DATE OPERATION .....	43
REMOTE KEY OPERATION .....	45
REMOTE SERIAL OPERATION .....	46
<i>Display Capture Utility.....</i>	46
Example #1 .....	47
Example #2 .....	47
TARGET AND TOLERANCE SETUP .....	47
RS-485 MULTI-DROP NETWORK SETUP AND OPERATION .....	48
<i>Setup.....</i>	48
<i>Operation .....</i>	49
<i>Network Protocol.....</i>	49
<b>CHAPTER 5: Calibration.....</b>	<b>51</b>
SETUP MODE CALIBRATION .....	51
FAST CALIBRATION .....	51
PERFORMING CALIBRATION .....	52
<i>Select and Calibration Method and Establish Zero .....</i>	52
First Zero?.....	52
Last Zero .....	53
False Zero .....	54
Only Zero.....	55
Reset Calibration.....	56
<i>Establishing A Span .....</i>	58
<i>Exiting Calibration .....</i>	58
<b>CHAPTER 6: Legal For Trade.....</b>	<b>61</b>
NTEP REQUIREMENTS .....	61
OIML REQUIREMENTS .....	62
OTHER REQUIREMENTS .....	62
SEALING AND AUDIT TRAILS .....	62
<i>Physical Seal.....</i>	63
<i>Audit Trails .....</i>	64
<i>OIML Audit Trail .....</i>	64
Calibration Audit Trail.....	65
Setup Audit Trail.....	65
Viewing Audit Trail Parameters.....	65
<b>CHAPTER 7: Model 351 Options .....</b>	<b>67</b>
RS- 485 NETWORKING .....	67
<i>Network Connections .....</i>	68

Half-Duplex (2-wire) .....	69
Full Duplex (4-wire) .....	69
Both Half Duplex and Full Duplex .....	69
20 MA CURRENT LOOP OPERATION .....	72
<i>Installation</i> .....	72
<i>Bi-Directional</i> .....	72
<i>Baud</i> .....	72
<i>Active/Passive</i> .....	72
<i>Isolation</i> .....	73
<i>Max Voltage</i> .....	73
<i>Connections</i> .....	73
<i>Cable</i> .....	73
<i>Connected Devices</i> .....	74
<b>CHAPTER 8: Troubleshooting</b> .....	<b>75</b>
ERROR MESSAGES .....	75
<i>Operational Errors</i> .....	75
<i>Setup Mode Errors</i> .....	76
<i>Hardware Errors</i> .....	77
<i>Calibration Errors</i> .....	77
<i>Communication Errors</i> .....	78
<i>Miscellaneous Errors</i> .....	78
VIEWING SETUP .....	78
INFORMATION MODE PARAMETERS .....	79
A/D CALIBRATION PROCEDURE .....	81

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/GSE/351 technical reference manual.html](https://the-checkout-tech.com/manuals/GSE/351%20technical%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)