

# *GSE*

## *Model 370 & Model 375*

Precision Counting Scale



Technical Reference Manual  
Version 1.0

# Table of Contents

<b>CHAPTER 1: INTRODUCTION .....</b>	<b>1</b>
ENCLOSURE.....	1
LOAD CELL REPLACEMENT.....	1
<i>Load Cell Connections .....</i>	2
KEYPAD .....	2
<i>Model 370.....</i>	2
<i>MODEL 375 .....</i>	3
DISPLAY .....	5
<i>Annunciators .....</i>	5
REAR PANEL CONNECTIONS.....	5
<i>Communication Port I.....</i>	6
<i>Remote Display Connections.....</i>	6
<b>CHAPTER 2: OPTION INSTALLATION.....</b>	<b>7</b>
COMMUNICATION.....	7
<i>RS-485 Networking.....</i>	7
<i>20 mA Current Loop Option.....</i>	9
ANALOG OUTPUT OPTION.....	11
SETPOINT OPTION .....	12
<i>Setpoint Card Connections.....</i>	13
OPTION MOUNTING BRACKET.....	13
<b>CHAPTER 3: SCALE CONFIGURATION .....</b>	<b>15</b>
ENTERING THE SETUP MODE (MODEL 370).....	15
ENTERING THE SETUP MODE (MODEL 375).....	16
SELECTING A PARAMETER.....	16
CHANGING A PARAMETER VALUE.....	17
<i>Selection Parameters.....</i>	17
SAVING PARAMETERS .....	19
FACTORY DEFAULT.....	20
LIST OF PARAMETERS.....	20
<i>Parameter Map Details .....</i>	23
PRINTING.....	29
<i>Preset Transmit Selections .....</i>	29
<i>Custom Transmit .....</i>	31
ANALOG OUTPUT PARAMETER SETUP.....	35
<i>Analog Output Example.....</i>	35
SETPOINT CONFIGURATION .....	36
<i>Activation Methods (General) .....</i>	37
<i>Percentage Check-Weighing .....</i>	39
<i>Fill .....</i>	40
<i>Batch.....</i>	41
<i>Discharge .....</i>	43
<i>Both .....</i>	45
<i>Absolute Check-Weighing.....</i>	46
<i>Independent Setpoint Operation.....</i>	47
<i>Target Deviation Check-Weighing .....</i>	49
PARTS COUNTING.....	50
REMOTE SERIAL OPERATION.....	51
<i>D</i> <i>SPLAY CAPTURE UTILITY.....</i>	51
TIME AND DATE SETUP (MODEL 370).....	52

TIME AND DATE SETUP (MODEL 375).....	53
UPGRADE MODEL 370/375 FIRMWARE .....	53
<i>Prepare For Upgrade</i> .....	54
<i>Load Flash File</i> .....	54
REMOTE DISPLAY CONFIGURATION .....	55
<i>Master To Remote (Slave) Configuration</i> .....	55
<i>Setup Master Unit</i> .....	55
<i>Setup Remote Unit</i> .....	56
<i>Access The Setup Mode from the Remote Display Mode</i> .....	58
300 SERIES COMMAND CODES .....	59
ID NUMBER ENTRY.....	60
<b>CHAPTER 4: CALIBRATION.....</b>	<b>61</b>
SETUP MODE CALIBRATION .....	61
<i>Fast Calibration</i> .....	61
<i>Performing Calibration</i> .....	61
<i>First Zero</i> .....	62
<i>Last Zero</i> .....	63
<i>False Zero</i> .....	65
<i>Only Zero</i> .....	66
<i>Reset Calibration</i> .....	67
MULTI-POINT LINERIZATION .....	69
EXAMINING CALIBRATION RESULTS .....	70
<i>Establishing A Span</i> .....	70
EXITING CALIBRATION.....	71
ANALOG OUTPUT CALIBRATION .....	71
<b>CHAPTER 5: TROUBLESHOOTING .....</b>	<b>73</b>
ERROR MESSAGES .....	73
<i>Operational Errors</i> .....	73
<i>Setup Mode Errors</i> .....	74
<i>Hardware Errors</i> .....	74
<i>Calibration Errors</i> .....	75
<i>Communication Errors</i> .....	75
<i>Miscellaneous Errors</i> .....	75
<i>Viewing Setup</i> .....	75
<i>Information Mode Parameters (370 and 375)</i> .....	76
A/D CALIBRATION PROCEDURE .....	77
ANALOG BOARD DIAGNOSTICS AND TEST PROCEDURES .....	77

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/GSE/370\\_and\\_375\\_technical\\_reference\\_manual.htm](https://the-checkout-tech.com/manuals/GSE/370_and_375_technical_reference_manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)