

GSE

Model 370 & Model 375

Precision Counting Scale



Technical Reference Manual
Version 1.0

Table of Contents

CHAPTER 1: INTRODUCTION	1
ENCLOSURE.....	1
LOAD CELL REPLACEMENT	1
<i>Load Cell Connections</i>	2
KEYPAD	2
<i>Model 370</i>	2
<i>MODEL 375</i>	3
DISPLAY.....	5
<i>Annunciators</i>	5
REAR PANEL CONNECTIONS.....	5
<i>Communication Port 1</i>	6
<i>Remote Display Connections</i>	6
CHAPTER 2: OPTION INSTALLATION	7
COMMUNICATION.....	7
<i>RS-485 Networking</i>	7
<i>20 mA Current Loop Option</i>	9
ANALOG OUTPUT OPTION	11
SETPOINT OPTION	12
<i>Setpoint Card Connections</i>	13
OPTION MOUNTING BRACKET.....	13
CHAPTER 3: SCALE CONFIGURATION	15
ENTERING THE SETUP MODE (MODEL 370).....	15
ENTERING THE SETUP MODE (MODEL 375).....	16
SELECTING A PARAMETER.....	16
CHANGING A PARAMETER VALUE.....	17
<i>Selection Parameters</i>	17
SAVING PARAMETERS	19
FACTORY DEFAULT	20
LIST OF PARAMETERS.....	20
<i>Parameter Map Details</i>	23
PRINTING.....	29
<i>Preset Transmit Selections</i>	29
<i>Custom Transmit</i>	31
ANALOG OUTPUT PARAMETER SETUP.....	35
<i>Analog Output Example</i>	35
SETPOINT CONFIGURATION	36
<i>Activation Methods (General)</i>	37
<i>Percentage Check-Weighing</i>	39
<i>Fill</i>	40
<i>Batch</i>	41
<i>Discharge</i>	43
<i>Both</i>	45
<i>Absolute Check-Weighing</i>	46
<i>Independent Setpoint Operation</i>	47
<i>Target Deviation Check-Weighing</i>	49
PARTS COUNTING.....	50
REMOTE SERIAL OPERATION.....	51
<i>DISPLAY CAPTURE UTILITY</i>	51
TIME AND DATE SETUP (MODEL 370).....	52

TIME AND DATE SETUP (MODEL 375)	53
UPGRADE MODEL 370/375 FIRMWARE	53
<i>Prepare For Upgrade</i>	54
<i>Load Flash File</i>	54
REMOTE DISPLAY CONFIGURATION	55
<i>Master To Remote (Slave) Configuration</i>	55
<i>Setup Master Unit</i>	55
<i>Setup Remote Unit</i>	56
<i>Access The Setup Mode from the Remote Display Mode</i>	58
300 SERIES COMMAND CODES	59
ID NUMBER ENTRY.....	60
CHAPTER 4: CALIBRATION.....	61
SETUP MODE CALIBRATION	61
<i>Fast Calibration</i>	61
<i>Performing Calibration</i>	61
<i>First Zero</i>	62
<i>Last Zero</i>	63
<i>False Zero</i>	65
<i>Only Zero</i>	66
<i>Reset Calibration</i>	67
MULTI-POINT LINERIZATION	69
EXAMINING CALIBRATION RESULTS	70
<i>Establishing A Span</i>	70
EXITING CALIBRATION.....	71
ANALOG OUTPUT CALIBRATION	71
CHAPTER 5: TROUBLESHOOTING	73
ERROR MESSAGES	73
<i>Operational Errors</i>	73
<i>Setup Mode Errors</i>	74
<i>Hardware Errors</i>	74
<i>Calibration Errors</i>	75
<i>Communication Errors</i>	75
<i>Miscellaneous Errors</i>	75
<i>Viewing Setup</i>	75
<i>Information Mode Parameters (370 and 375)</i>	76
A/D CALIBRATION PROCEDURE	77
ANALOG BOARD DIAGNOSTICS AND TEST PROCEDURES	77

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*